



**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

**1. REMOVE TRIM AND DISCONNECT**

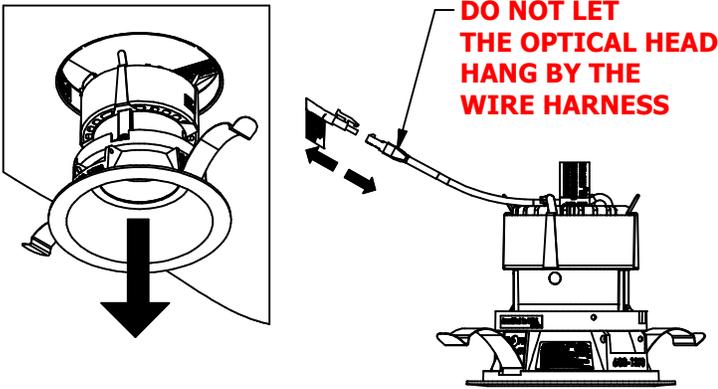


**2. OPEN DRIVER MOUNTING PLATE**

PUSH TAB TO THE SIDE, OPEN, AND SLIDE DOOR OUT

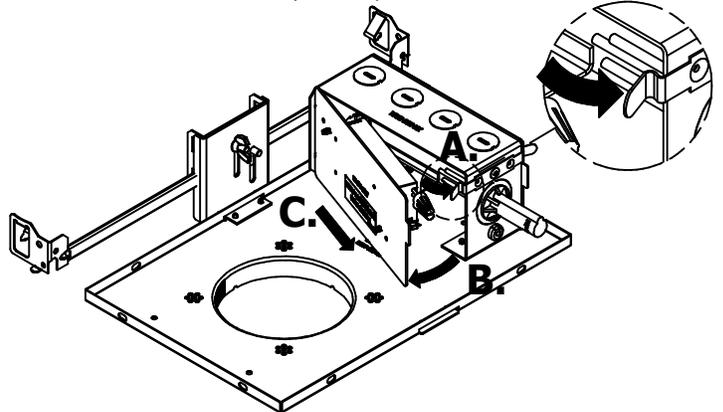


**3. PULL DRIVER PLATE OUT OF FRAME**

DISCONNECT PRIMARY AND SECONDARY DRIVER WIRES

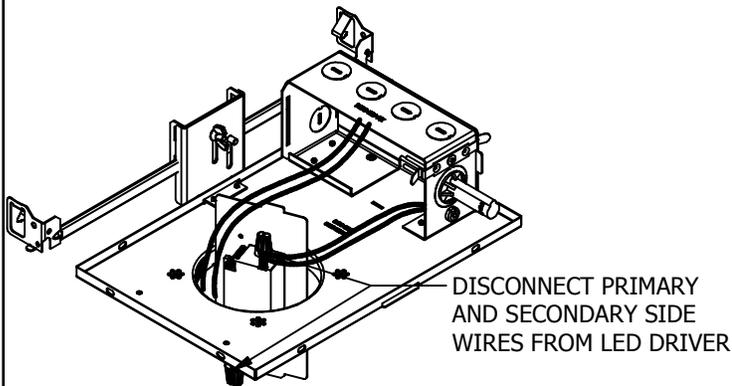

**4. REPLACE DRIVER FROM DRIVER PLATE**


REMOVE (2x) SCREWS OR (2x) NUTS HOLDING DRIVER TO DRIVER PLATE. REASSEMBLE USING REPLACEMENT DRIVER

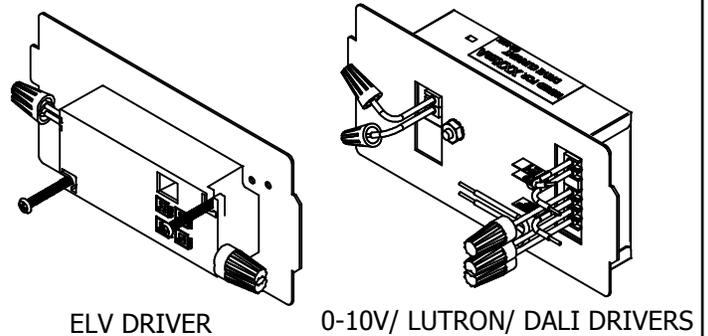

**5. RECONNECT DRIVER WIRES**

CUTOUT FOR DOOR

FLANGE

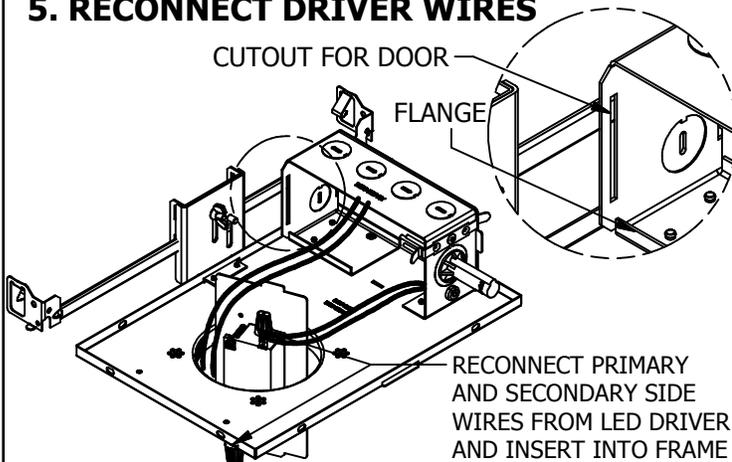

**6. CLOSE DRIVER MOUNTING PLATE**

SLIDE PLATE ALONG FLANGE UNTIL IT FALLS INTO CUTOUT. CLOSE DOOR, RECONNECT AND INSERT TRIM

