


**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

- 1** LOOSEN (DON'T REMOVE) SET SCREW TO SEPARATE MOUNTING FLANGE FROM FIXTURE
- 2** ATTACH MOUNTING FLANGE TO STRUCTURE (B.O.) WITH MOUNTING HARDWARE B.O. (HOLES 1-3/16" O.C.)
- 3** SPLICE FIXTURE WIRES TO INCOMING WIRES. FIELD CONDITIONS TO DETERMINE IF WIRES ARE SPLICED BEFORE OR AFTER MOUNTING FLANGE IS INSTALLED.
- 4** SLIDE FIXTURE OVER MOUNTING FLANGE WITH SET SCREW POINTED DOWN
- 5** ADJUST FIXTURE TILT THEN TIGHTEN SET SCREW

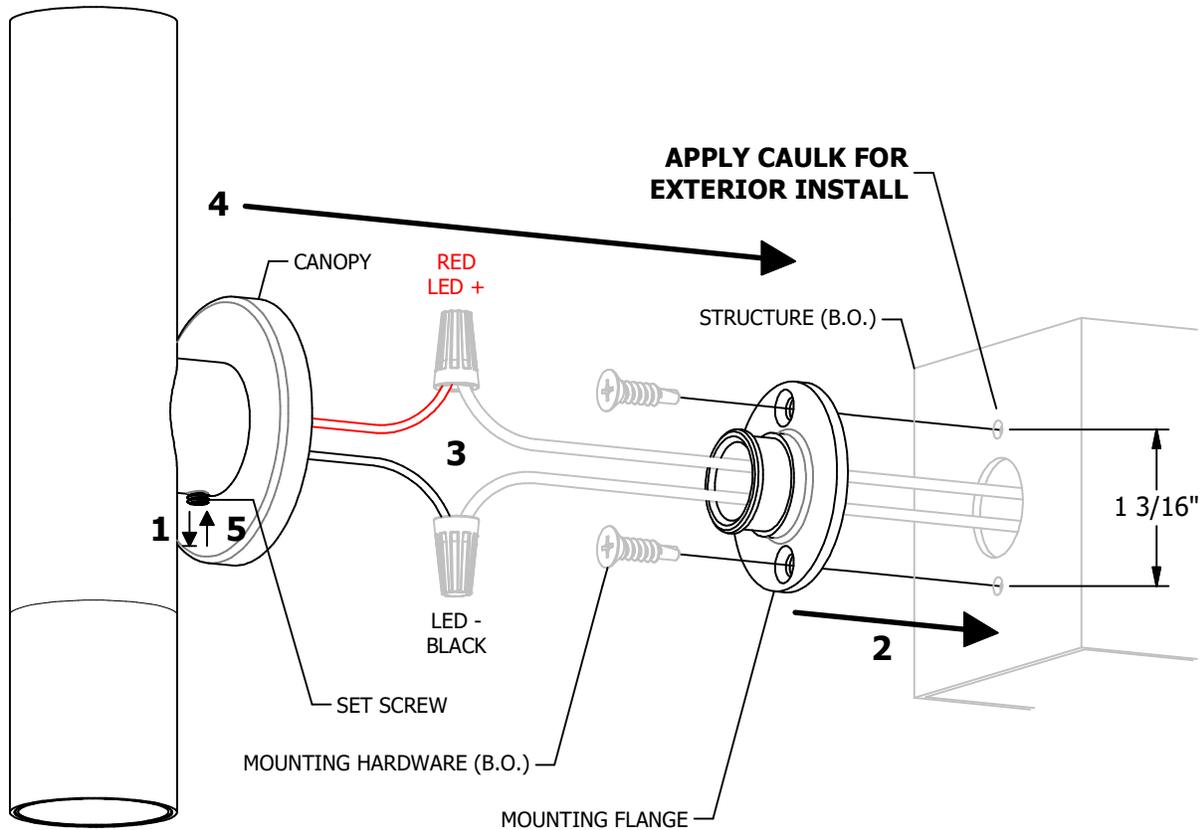

DI FIXTURE WIRES		48V FIXTURE WIRES	
RED/WHITE INDIRECT LED +	BLACK/WHITE INDIRECT LED -	PURPLE DIM +	RED V +
DIRECT LED + RED	DIRECT LED - BLACK	PINK DIM -	BLACK V -

**Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)**