



AMERLUX[®]
LIGHTING SOLUTIONS

ADAPT. ABILITY.™

INSTALLATION INSTRUCTIONS
SHEET #: 689-0732

SPEC. SHEET
REFERENCE:
QLP1-EC

QLP1-EC

QLP1.5 End Cap Kit Installation

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING .
RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

Pre-installation Note:

The actions outlined on this sheet are to be performed before fixture is hung, while still on the ground.

QLP1-EC Contents

 


Cable Gripper (x1)
Amerlux P/N:
636-7060




#6 x 1/4" Screw (x2)
Amerlux P/N:
622-3022

End Cap (x2)
Amerlux P/N:
610-139G-HW



Lock Washer (x1)
Amerlux P/N:
648-0140


Fixture MoR (Sold / Shipped Separately)

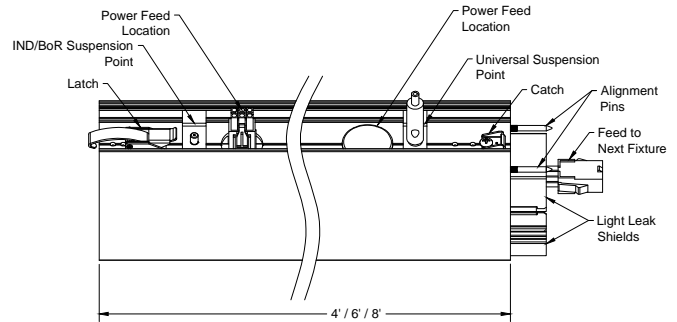

Creating a Beginning of Run (BoR)


1: Remove Latch

Via (2) Screws. Discard.

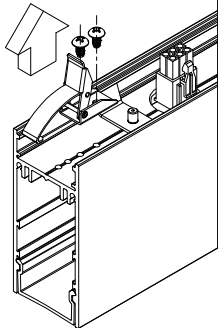


2: Install Cable Gripper

Make sure gripper is tightly secured.

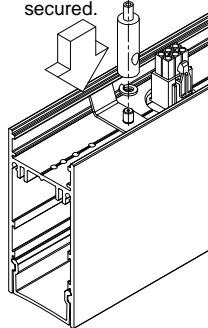

3: Install End Cap

A. Remove adhesive strip's non-stick covers


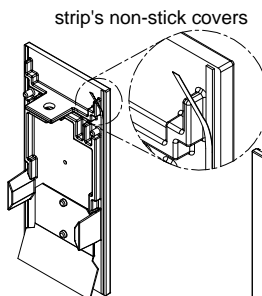


***INSTALL POWER FEED**

BEFORE END CAP*

See 689-0736 / 0737 / 0738 / 0739
(Located in Feed Kit)


B. Firmly attach end cap

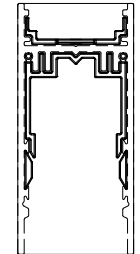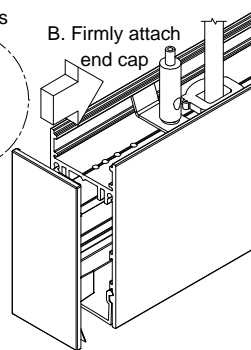

Embossments on end cap to line up with extrusion profile as shown

C. Secure end cap with provided

#6-32x1/4" screw*

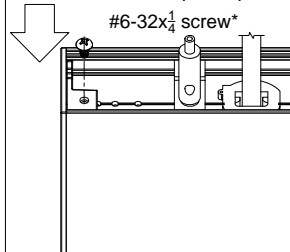

*** DO NOT over tighten screw. Hand Tightening is recommended.**
(Over tightening will cause bottom of end cap to separate from fixture)


Correct

End cap should sit flush with side of housing extrusion as shown

If End Cap separates as shown, loosen screw until it sits flush

Incorrect


Complete BoR

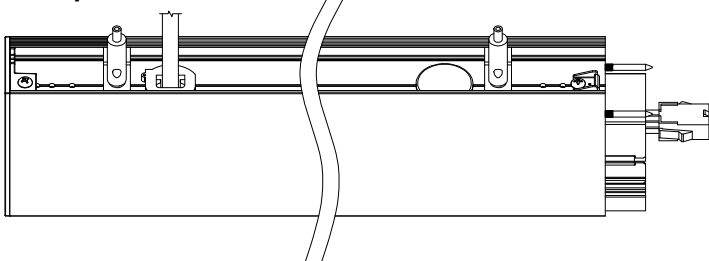

Creating an End of Run (EoR)


1: Remove Shields & Pins

Using pliers, remove all (3) light leak shields and (2) alignment pins. Discard.

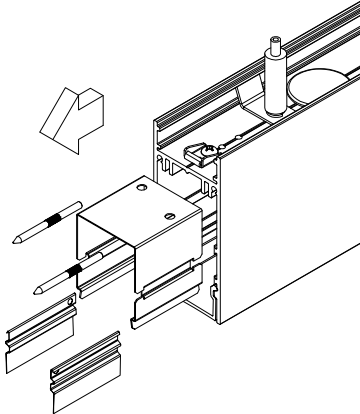


2: Remove Catch

Via (1) Screws. Discard.

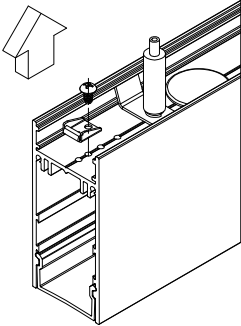

3: Install End Cap

A. Remove adhesive strip's non-stick covers


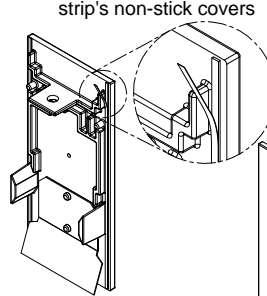


*INSTALL POWER FEED

BEFORE END CAP*

See 689-0736 / 0737 / 0738 / 0739
(Located in Feed Kit)


B. Firmly attach end cap

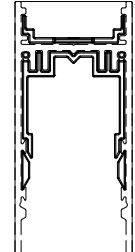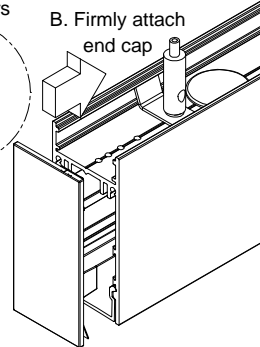

Embossments on end cap to line up with extrusion profile as shown

C. Secure end cap with provided

#6-32x $\frac{1}{4}$ screw*

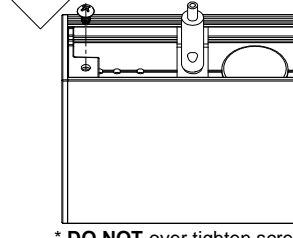


* **DO NOT** over tighten screw.
Hand Tightening is recommended.
(Over tightening will cause bottom of end cap to separate from fixture)

Correct
End cap should sit flush with side of housing extrusion as shown

If End Cap separates as shown, loosen screw until it sits flush

Incorrect

Complete EoR

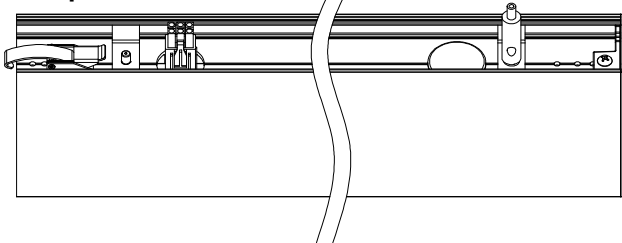

Creating an Individual (IND)

To create an IND fixture, please follow
ALL steps from BoR & EoR creation

Complete IND

