

INSTRUCTION SHEET



E4.75RA/SA-G2 HORNET- HP INSTALLATION


689-0505

PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

1 CUT HOLE IN CEILING

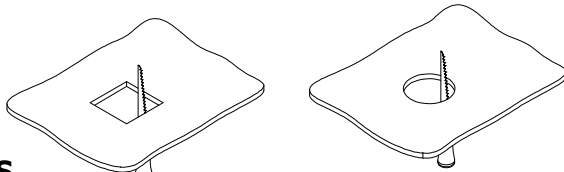


DIMENSIONS

E4.75RA ROUND: Ø5.375"

E4.75SA SQUARE: 5.375 X 5.375"


2 LOCATE FIXTURE

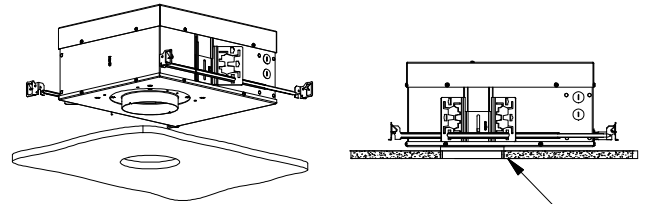

APERTURE TO BE FLUSH WITH BOTTOM OF CEILING


3 ADJUST FIXTURE

WING NUT ON INSIDE OF HOUSING

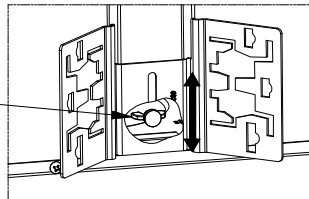

VERTICAL ADJUSTMENT



LOOSEN WING NUT, ADJUST HEIGHT THEN TIGHTEN WING NUT.

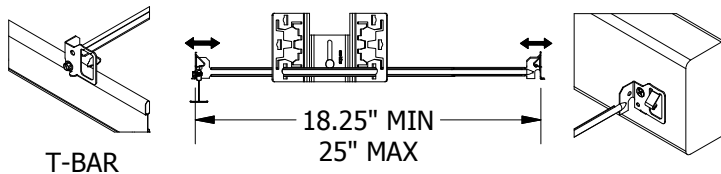

HORIZONTAL ADJUSTMENT

SPREAD HANGER BARS AND MOUNT TO T-BAR OR WOOD WITH HARDWARE SUPPLIED BY OTHERS.


4 INSTALL TRIM

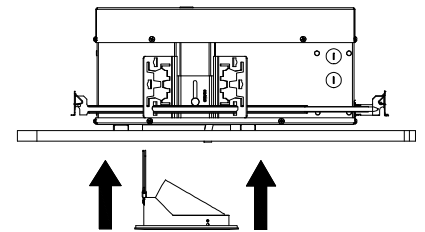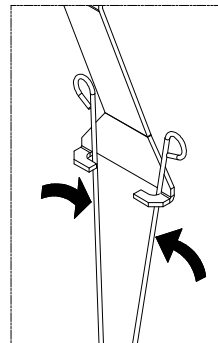

COMPRESS TORSION SPRING AND LOCATE SPRING IN BRACKET THEN INSERT TRIM INTO HOUSING.


5 MAKE ELECTRICAL CONNECTION

REMOVE ELECTRICAL KNOCKOUT AND MAKE CONNECTION TO LED DRIVER

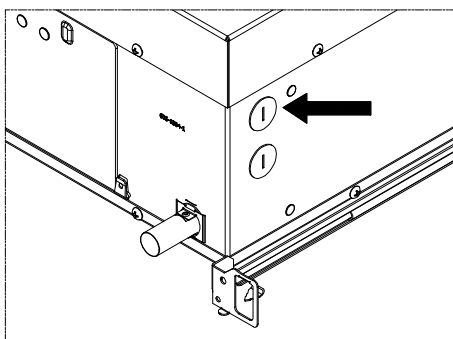


6 ADJUST TILT

1. LOOSEN THUMB SCREW
2. ADJUST OPTICAL HEAD
3. TIGHTEN THUMB SCREW

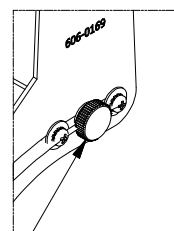

THUMB SCREW

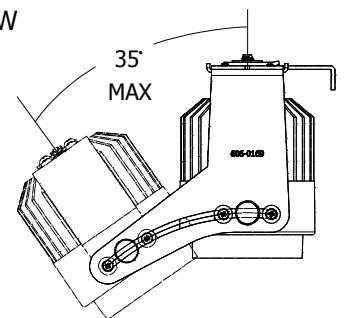

INSTRUCTION SHEET



E4.75RA/SA-G2 HORNET- HP MAINTENANCE


689-0505

PAGE 2 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.



RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

JUNCTION BOX ACCESS

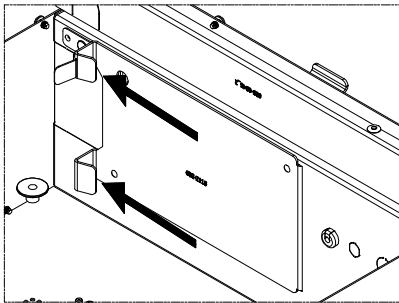

DRIVER DOOR ACCESS

REMOVE TRIM AND MOVE OPTICAL HEAD AWAY FROM BALLAST PLATE
FIRMLY PULL ON TABS AND SWING BALLAST PLATE AWAY

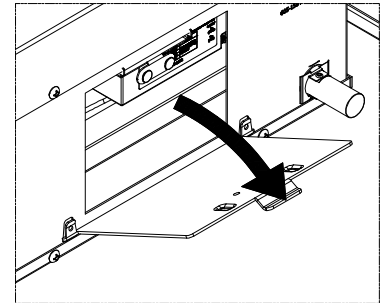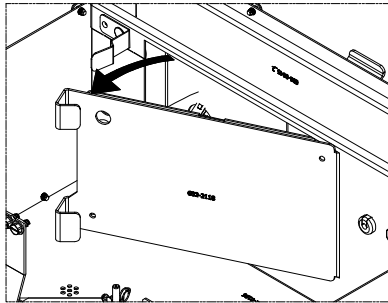


EXTERNAL ACCESS

PULL DOWN TAB AND DOOR AS SHOWN


LED/OPTICAL HEAD REPLACEMENT

1. REMOVE TRIM

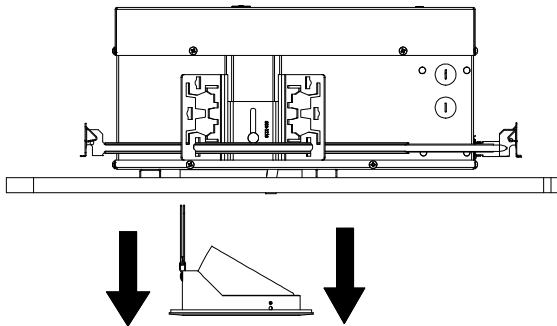


2. TILT OPTICAL HEAD TO REVEAL 2X #6 SCREW. REMOVE BOTH SCREWS


REMOVE SCREWS (2X)

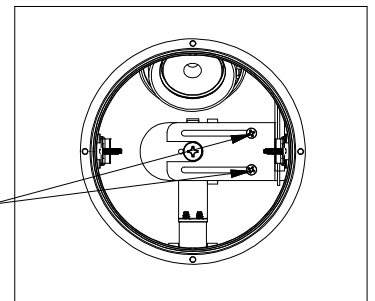

3. PULL OPTICAL HEAD THROUGH APERTURE HOLE

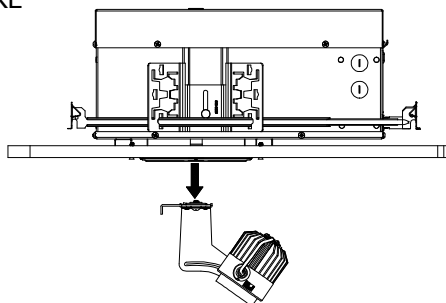

4. DISCONNECT OPTICAL HEAD HARNESS FROM JUNCTION BOX HARNESS

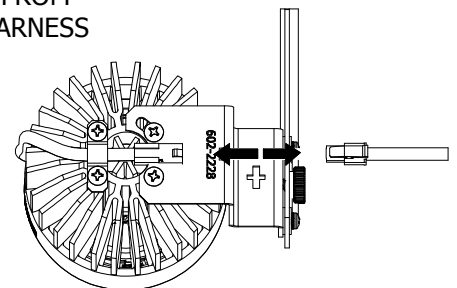

WARNING: DO NOT LET OPTICAL HEAD ASSEMBLY HANG FREELY AS THIS MAY CAUSE DAMAGE OR INJURY

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com