

INSTRUCTION SHEET




HDL2.5-RD/SD TRIM INSTALLATION

689-20159


PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

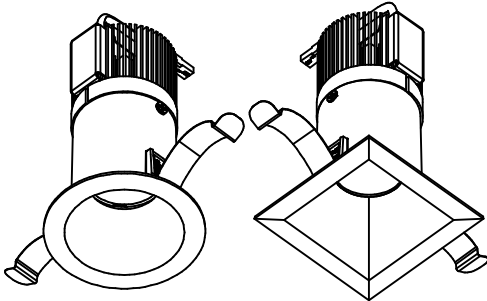

TRIMMED

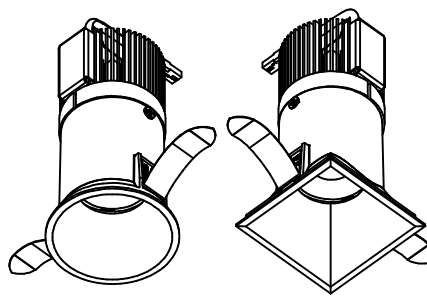


TRIMLESS

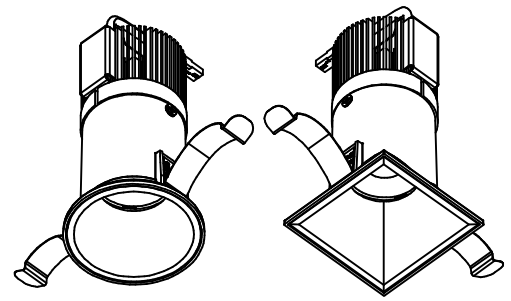

MILLWORK

1. MAKE ELECTRICAL CONNECTION.
CONNECT THE OPTICAL HEAD
HARNESS TO THE FRAME HARNESS
2. COMPRESS AND HOLD 2X SPRING CLIPS.
3. INSERT OPTICAL HEAD INTO CEILING CUTOUT.

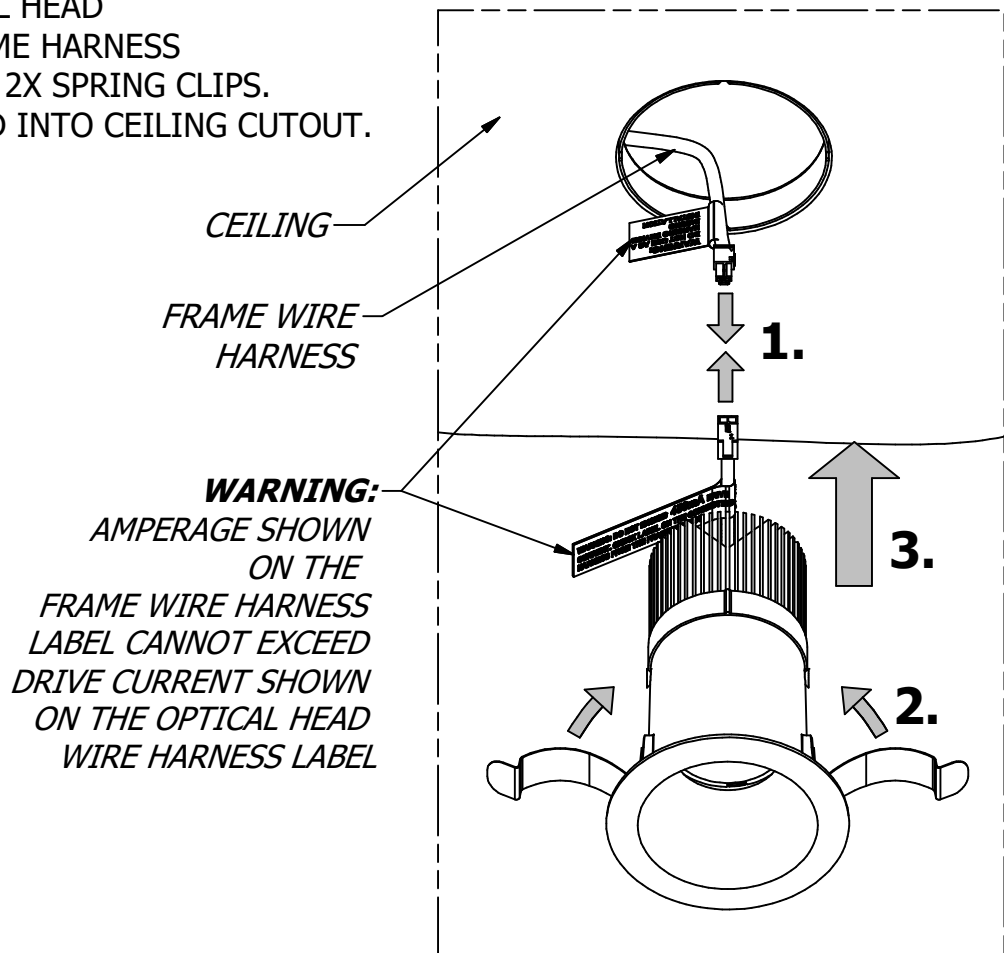

NOTE: HDL2.5-R TRIM SHOWN, FOLLOW THE SAME STEPS FOR SQUARE

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

INSTRUCTION SHEET



HDL2.5-RD/SD TRIM INSTALLATION

689-20159


PAGE 2 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

LED ENGINE AND BEAM CHANGE OUT

- 1. LOOSEN TWO SCREWS.**

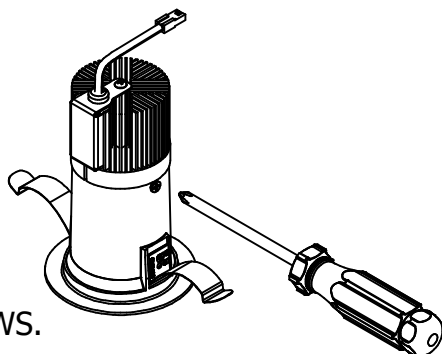


- 2. REMOVE LED ENGINE FROM THE TRIM**

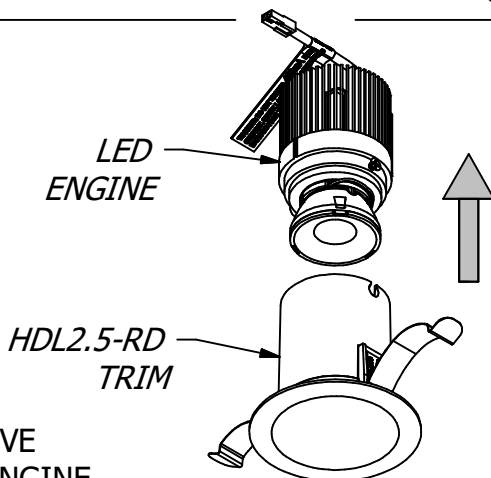

BEAM CHANGE OUT


- 3.a ROTATE TIR LENS COUNTERCLOCKWISE**

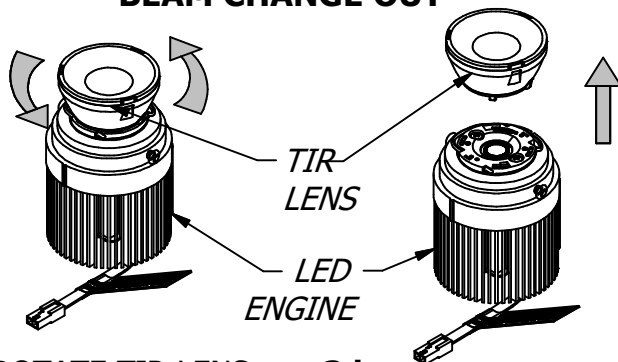


- 3.b**

ACCESSORY INSTALLATION OR CHANGE OUT

- 1. LOOSEN TWO SCREWS**

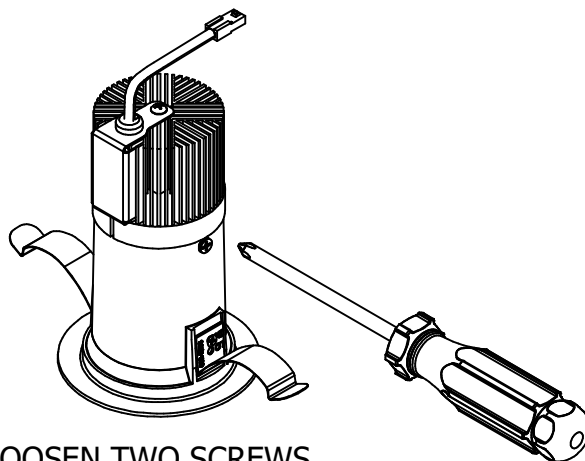

- 2. REMOVE LED ENGINE AND ACCESSORY FROM THE TRIM**

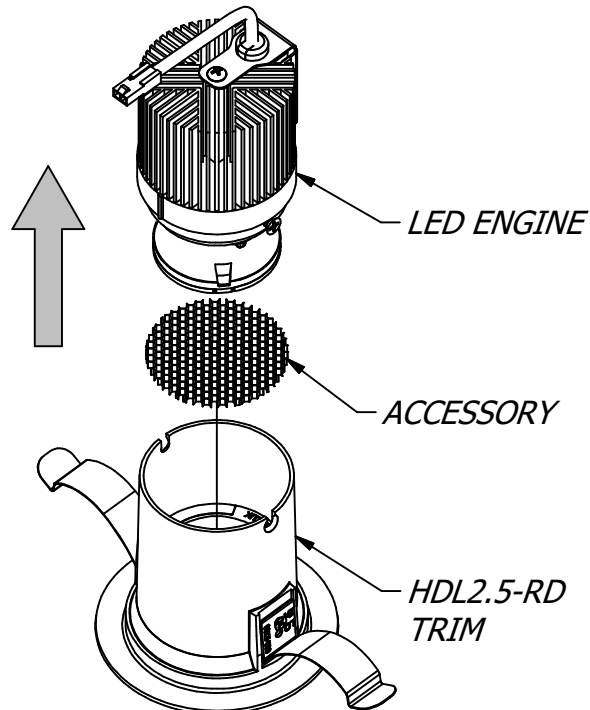

REASSEMBLE IN REVERSE ORDER

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com