
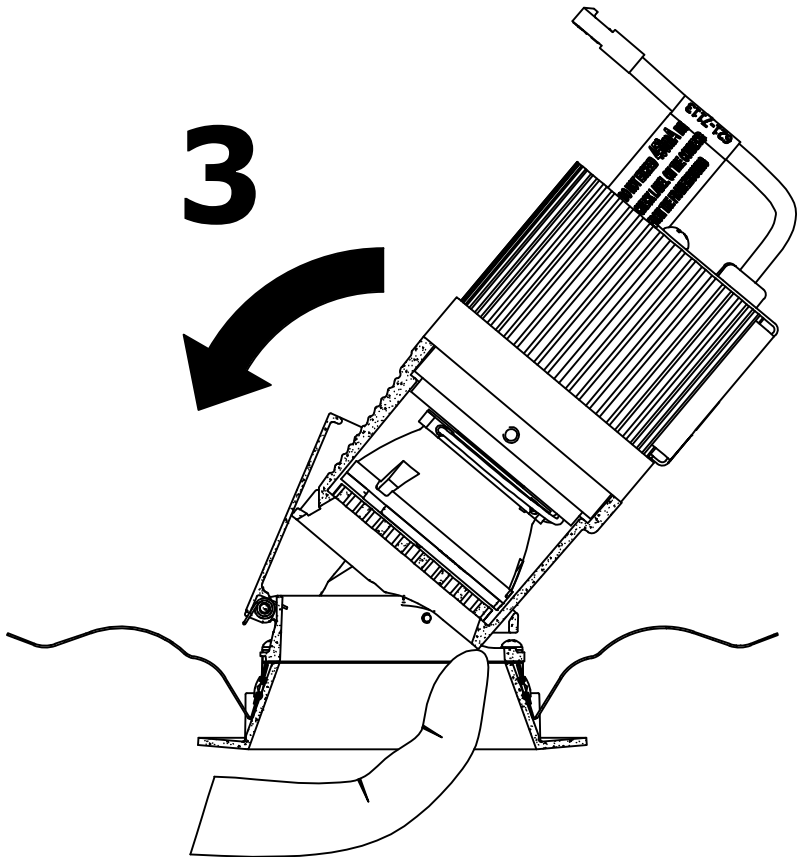



WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

DRIVER REMOVAL:

- 1. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE REPLACING DRIVER.
- 2. SHIFT LED ENGINE BACK TO "ZERO" POSITION. (MAX SHIFT 3/4")
- 3. ROTATE LED ENGINE BACK TO 0 DEGREES. (VERTICAL)

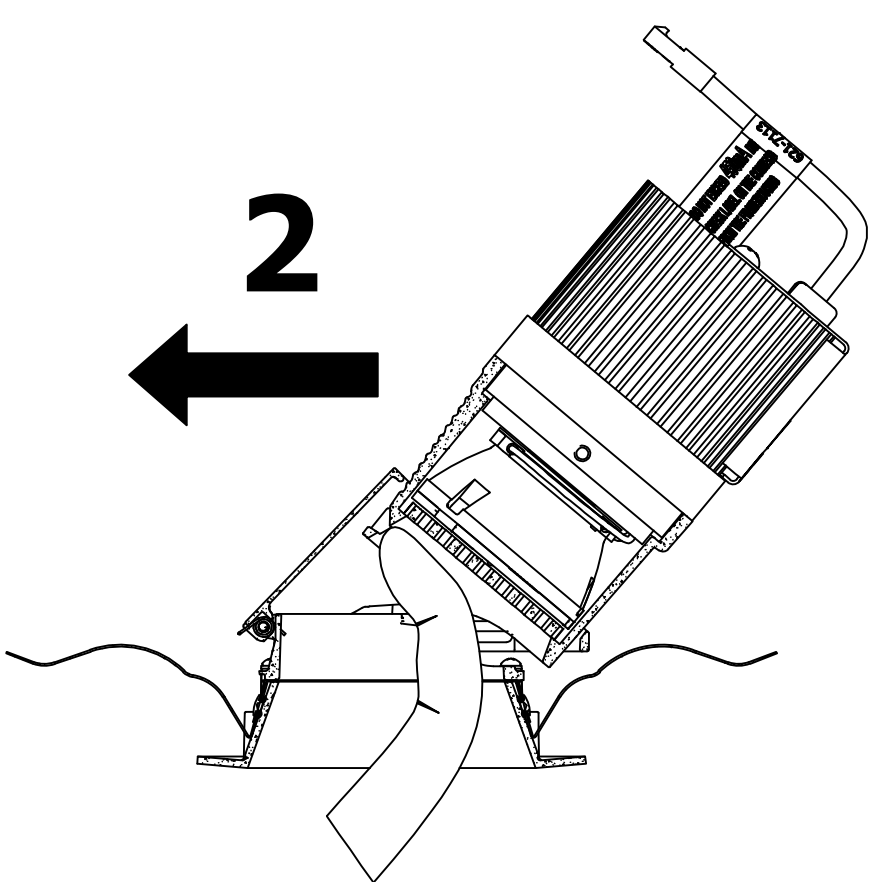


- 4. PULL OPTICAL HEAD DOWN. SPRINGS WILL COMPRESS.
- 5. RECONNECT ELECTRICAL CONNECTION.

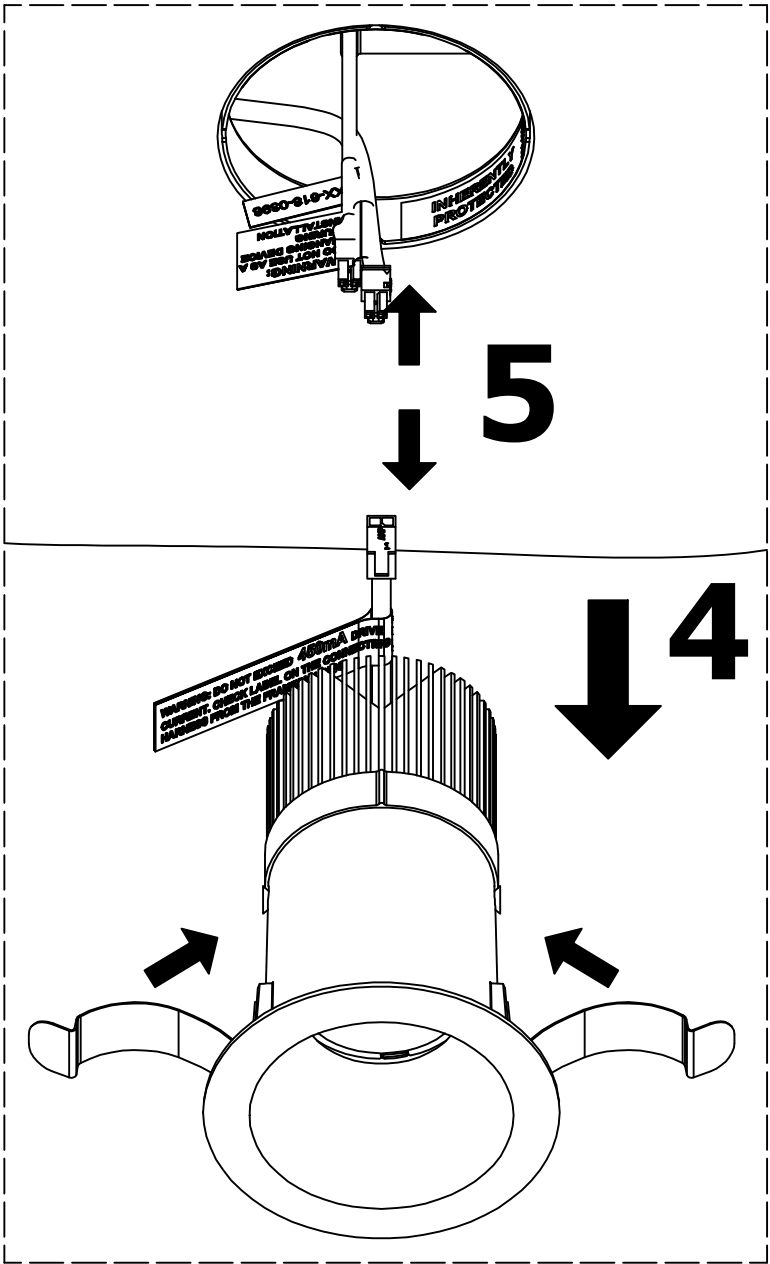

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

4. PRESS DOWN ON SPRING TO RELEASE DRIVER MODULE.
5. PULL FORWARD ON DRIVER CORD. MODULE WILL SLIDE OFF ITS TRACK.

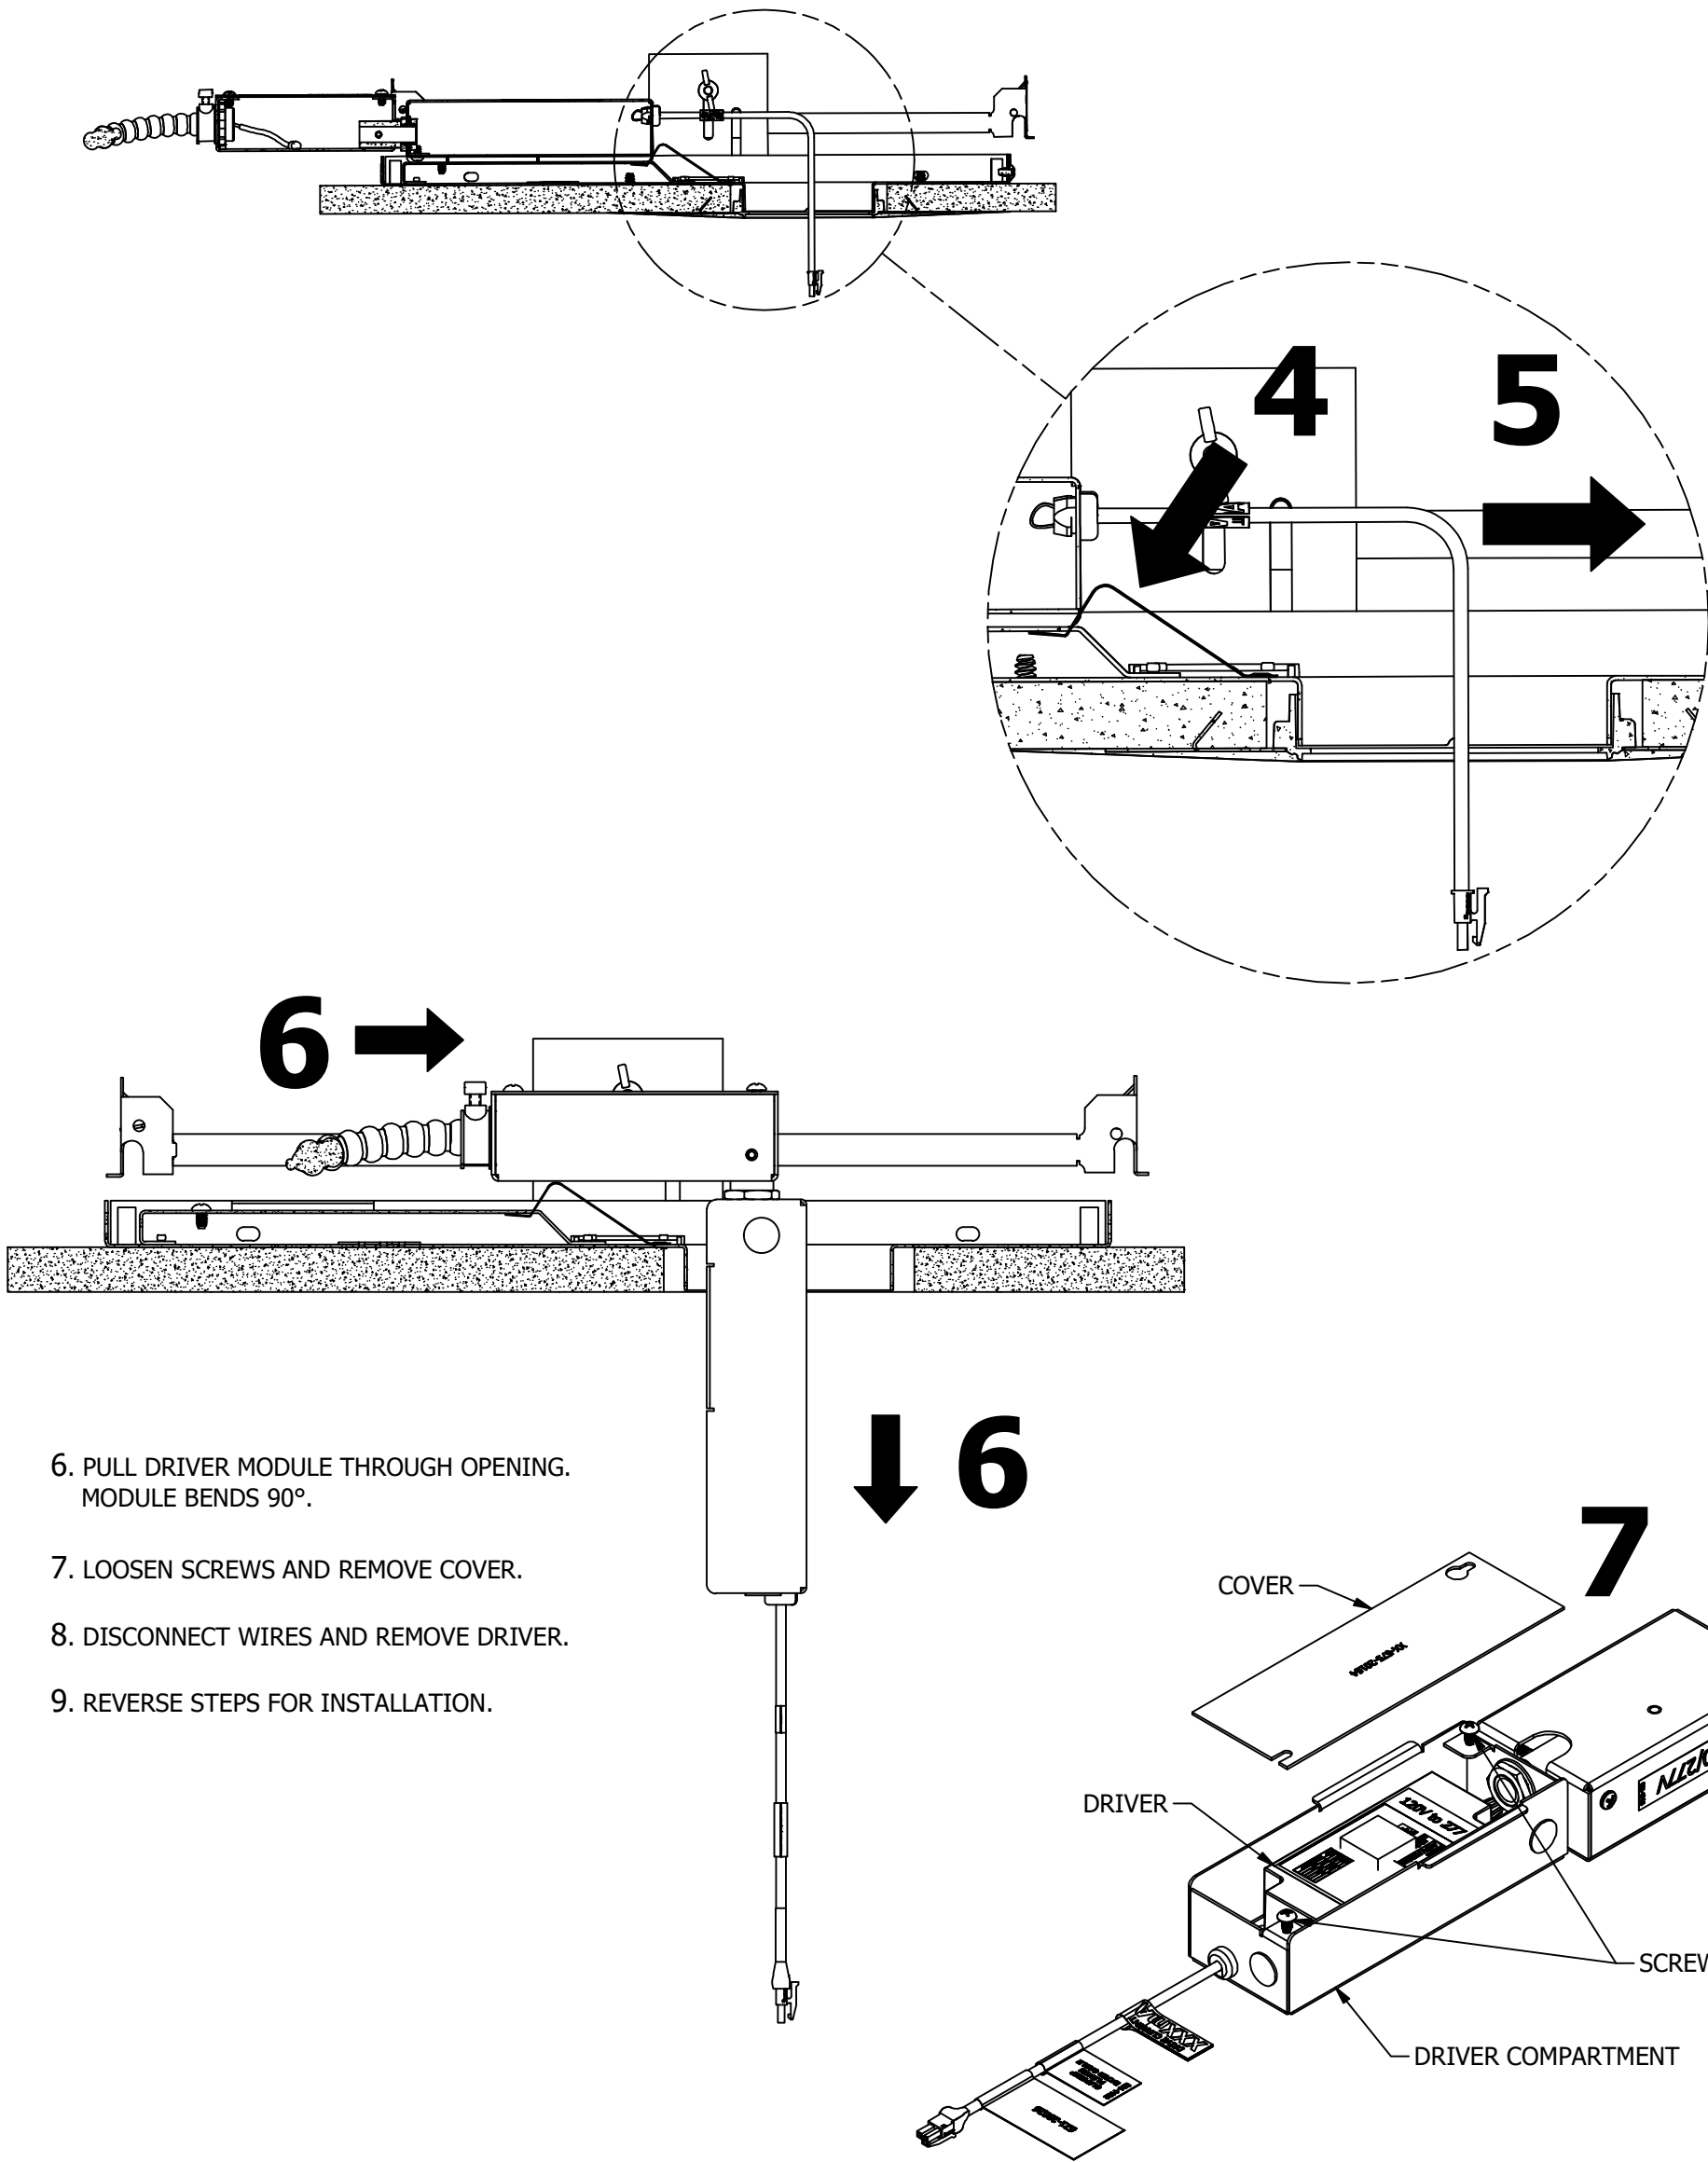

6. PULL DRIVER MODULE THROUGH OPENING. MODULE BENDS 90°.
7. LOOSEN SCREWS AND REMOVE COVER.
8. DISCONNECT WIRES AND REMOVE DRIVER.
9. REVERSE STEPS FOR INSTALLATION.