

# INSTRUCTION SHEET




## INSTRUCTION SHEET, HDL2.5-RW/SW TRIM INSTALLATION

689-20160


PAGE 1 OF 2

**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**

**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

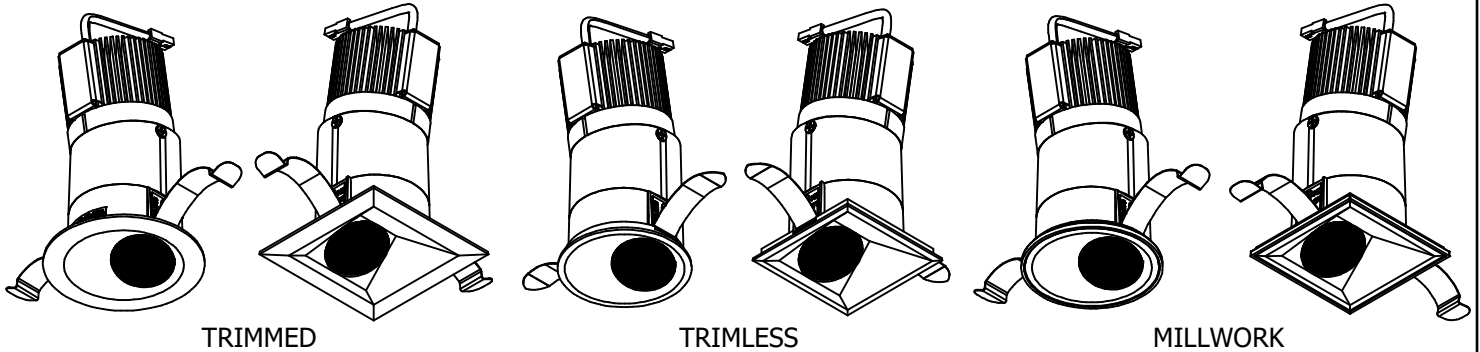

1. MAKE ELECTRICAL CONNECTION.  
CONNECT THE OPTICAL HEAD  
HARNESS TO THE FRAME HARNESS
2. COMPRESS AND HOLD 2X SPRING CLIPS.
3. INSERT OPTICAL HEAD INTO CEILING CUTOUT.

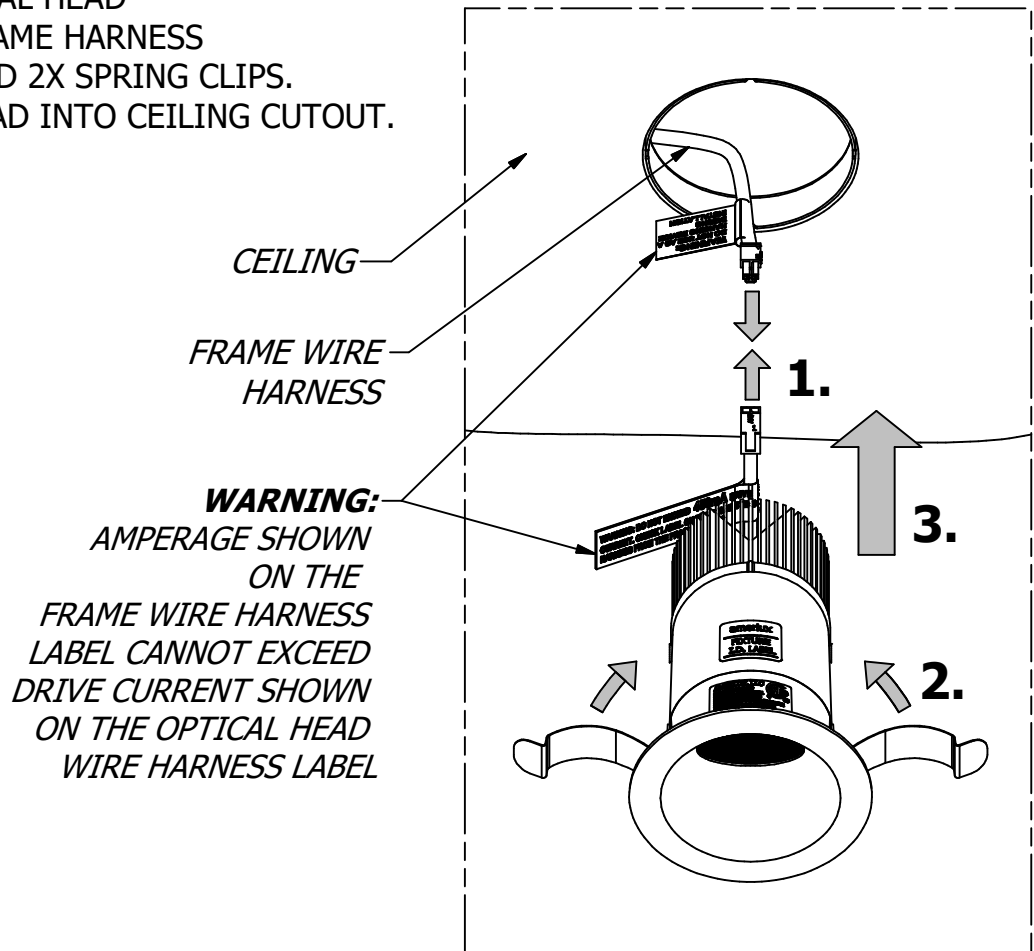

**NOTE: HDL2.5-R TRIM SHOWN, FOLLOW THE SAME STEPS FOR SQUARE**

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)

# INSTRUCTION SHEET



## HDL2.5-RW/SW TRIM INSTALLATION

689-20160


PAGE 2 OF 2

**WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.**


**RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.**

### LED ENGINE AND BEAM CHANGE OUT

- 1. LOOSEN TWO SCREWS.**

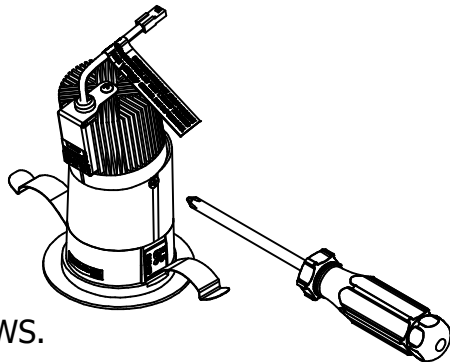


- 2. REMOVE LED ENGINE FROM THE TRIM**

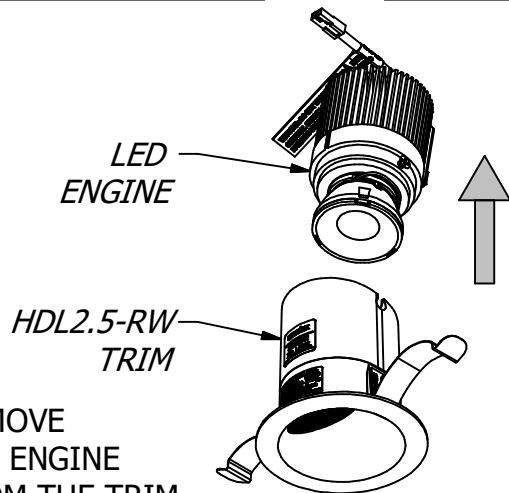

### BEAM CHANGE OUT


- 3.a ROTATE TIR LENS COUNTERCLOCKWISE**

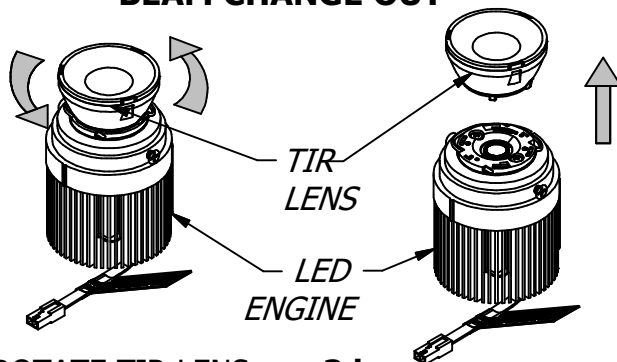

- 3.b**

**REASSEMBLE IN REVERSE ORDER**

### ORIENTATION OF OPTICAL HEAD

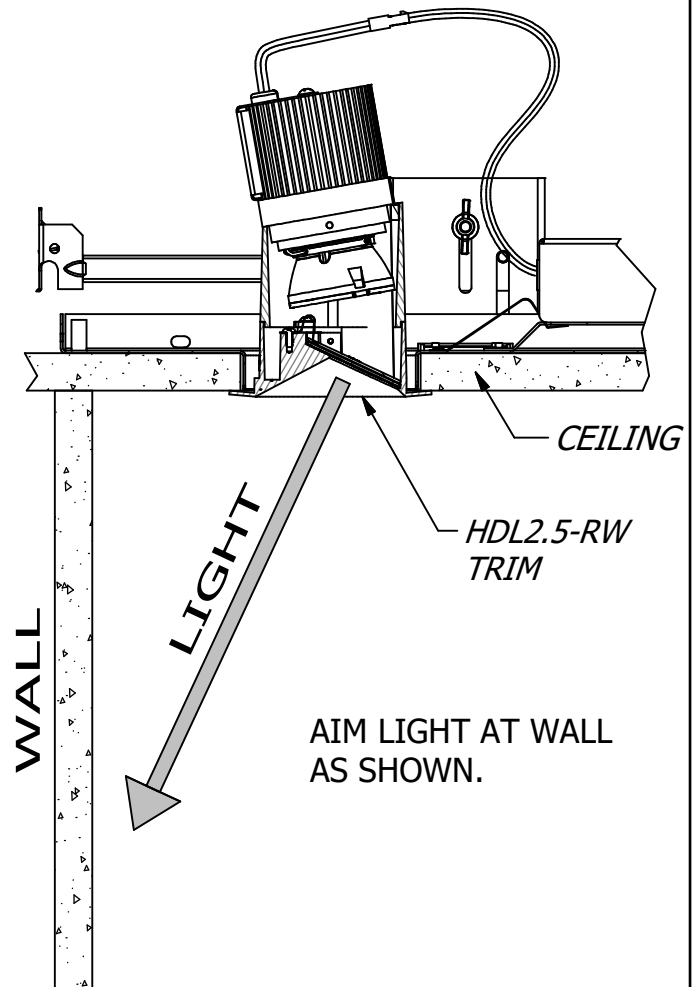

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 [www.amerlux.com](http://www.amerlux.com)