

ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0737

SPEC. SHEET REFERENCE: QLK-MF110/120

OLK-MF110/120

QLP Male Plug, 1 Circuit Feed Kit (Black or White)

 
WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING

FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

#### **Pre-installation Note:**


Supplied by others: - 4" octogonal junction boxes W/ 2pc #8 Screws for mounting Crossbar




Install junction box - The junction box should be placed as shown to make sure that the canopy cover sits flush with the ceiling when install is finished. Refer to Spec Sheet for proper location of mounting points/ locations for junction boxes.

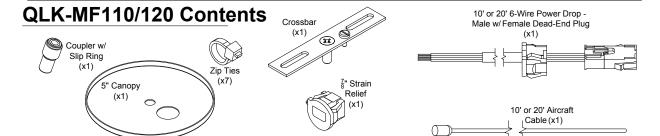

### Prep J-Box @ Ceiling

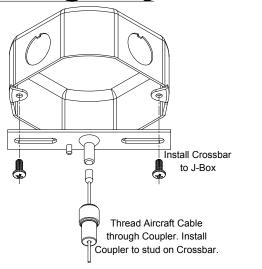

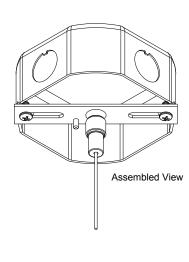



Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com


AMERLUX® ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0737

QuickLine Only On End of Run,

# Feeding at Middle / End of a Run (MoR / EoR)

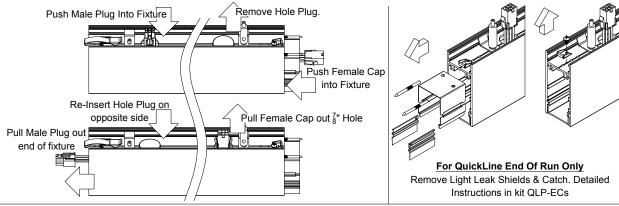

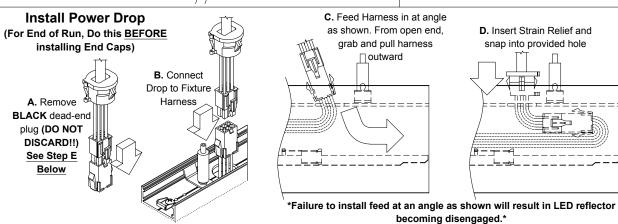

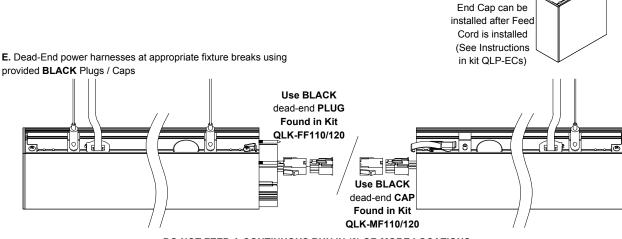


DO NOT FEED A CONTINUOUS RUN IN (2) OR MORE LOCATIONS. CONTINUOUS RUN POWER MUST BE BROKEN VIA DEAD-END CAPS/PLUGS

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com



AMERLUX® ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0737


## Connecting Fixture/Run to Power @ J-Box

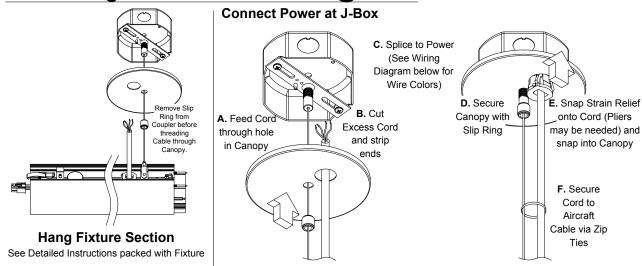





#### Dimmer: 0-10V (By Others)

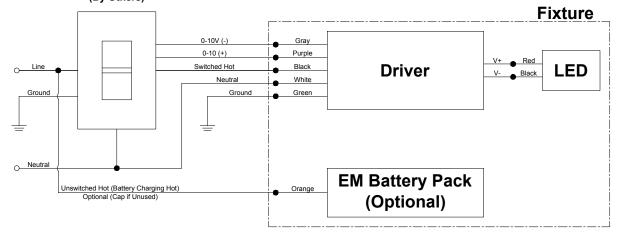

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com