AMERLUX BADAPT. ABILITY. INSTALLATION INSTRUCTIONS SHEET #: 689-0799

REFERENCE: QLRK-FF1

OLRK-FF1


QLR4 Female Plug, Feed Kit

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING


FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

QLR4-FF1 Contents

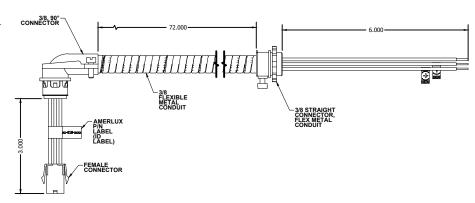


For Flange Beginning of Run (BoR) and Individual (IND)

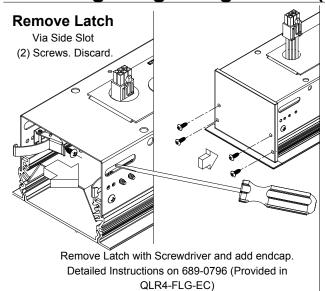


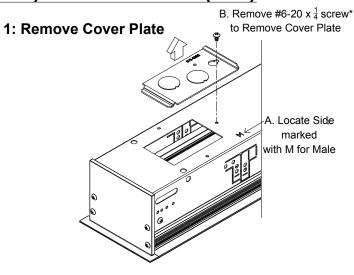


2: Remove One Knock Out

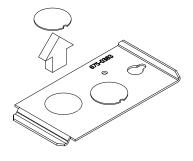


3: Pull Male Connector From Opening

 

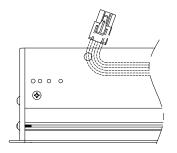


Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com


3: Pull Male Connector Through Cover, **Connect Female Connector from**

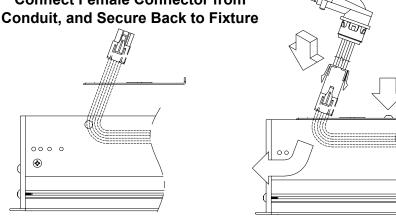


4: Push connectors into fixture as shown and secure 90° connector.

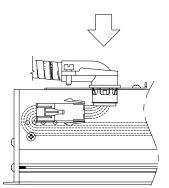

Flange Beginning of Run (BoR)

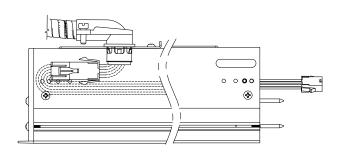


Flange Individual (IND)

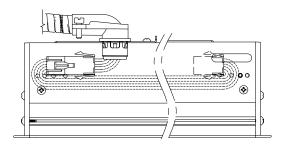

For Grid Individual (IND)

1: Follow steps 1 through 4 of Flange Instructions.

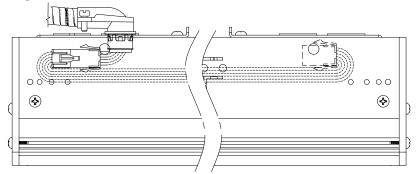


DO NOT FEED A CONTINUOUS RUN IN (2) OR MORE LOCATIONS.


Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0799

DO NOT MAKE A CONTINUOUS RUN WHEN FIXTURES ARE POWERED AT **BOTH ENDS**

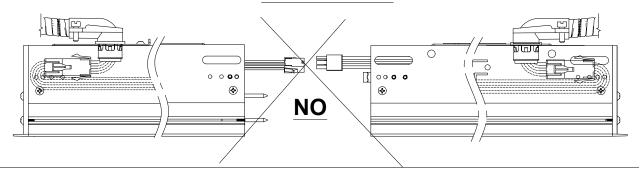


FEED ON ONE SIDE AND CONTINUE TO OTHER FIXTURE.

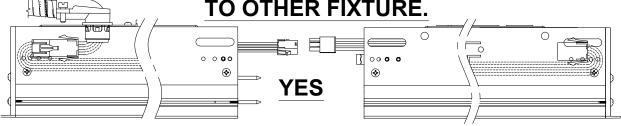


Wiring Schematic

 Wire Colors



Dimmer: 0-10V

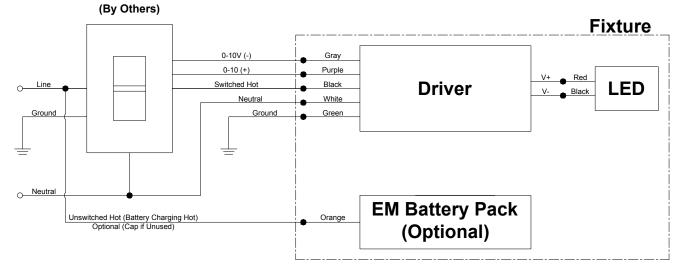

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com