AMERLUX BADAPT. ABILITY. INSTALLATION INSTRUCTIONS SHEET #: 689-0800

REFERENCE: QLRK-MF1

QLRK-MF1


QLR4 Male Plug, Feed Kit

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING


FOR RUNS WIRED FOR EM - UNIT HAS MORE THAN ONE POWER SUPPLY CONNECTION POINT. TO REDUCE THE RISK OF ELECTRIC SHOCK, DISCONNECT BOTH THE BRANCH CIRCUIT-BREAKERS OR FUSES AND EMERGENCY/BACKUP POWER SUPPLIES BEFORE SERVICING


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

QLR4-MF1 Contents

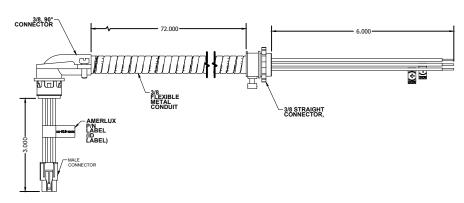


For Flange End of Run (EoR)

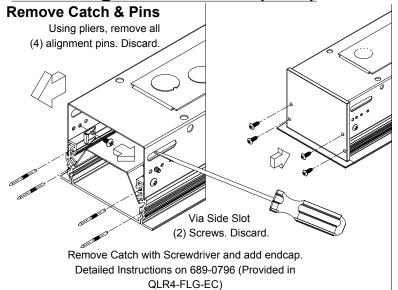


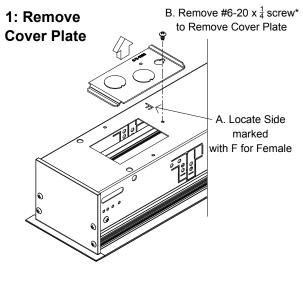


2: Remove One Knock Out

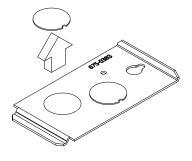




 


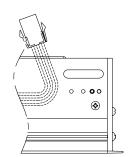


Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

3: Pull Female Connector Through **Cover, Connect Male Connector from** Conduit, and Secure Back to Fixture

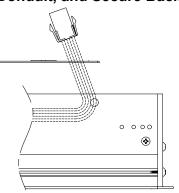


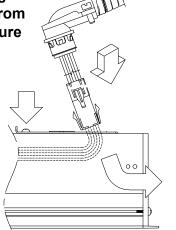

4: Push connectors into fixture as shown and secure 90° connector.

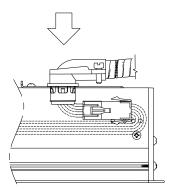


Flange End of Run (EoR)

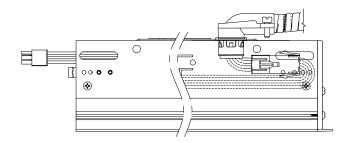


Flange Individual (IND)

Follow steps 1 through 4 of EoR Instructions.

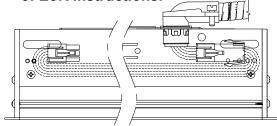


Flange Middle of Run (MoR)

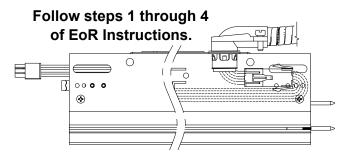

For Grid Individual (IND)


1: Follow steps 1 through 4 of Flange Instructions.

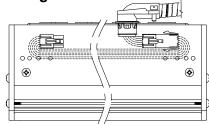


DO NOT FEED A CONTINUOUS RUN IN (2) OR MORE LOCATIONS.

ADAPT. ABILITY. THE INSTALLATION INSTRUCTIONS SHEET #: 689-0800

DO NOT MAKE A CONTINUOUS RUN WHEN FIXTURES ARE POWERED AT **BOTH ENDS**

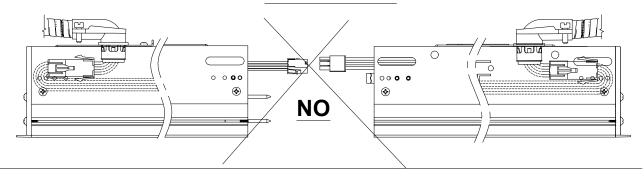

FEED ON ONE SIDE AND CONTINUE

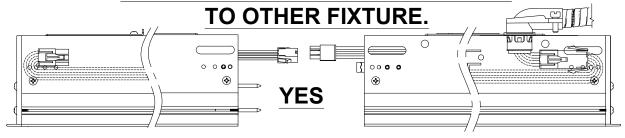


Wiring Schematic

Wire Colors



Dimmer: 0-10V

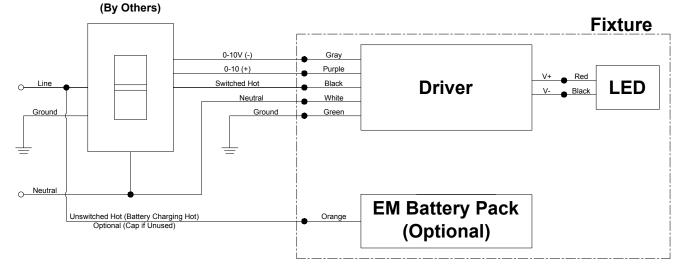

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com