


WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

- 1** LOOSEN (DON'T REMOVE) SET SCREW TO SEPARATE MOUNTING FLANGE FROM FIXTURE
- 2** ATTACH MOUNTING FLANGE TO STRUCTURE (B.O.) WITH MOUNTING HARDWARE B.O. (HOLES 1-3/16" O.C.)
- 3** SPLICE FIXTURE WIRES TO INCOMING WIRES. FIELD CONDITIONS TO DETERMINE IF WIRES ARE SPLICED BEFORE OR AFTER MOUNTING FLANGE IS INSTALLED.
- 4** SLIDE FIXTURE OVER MOUNTING FLANGE WITH SET SCREW POINTED DOWN
- 5** ADJUST FIXTURE TILT THEN TIGHTEN SET SCREW

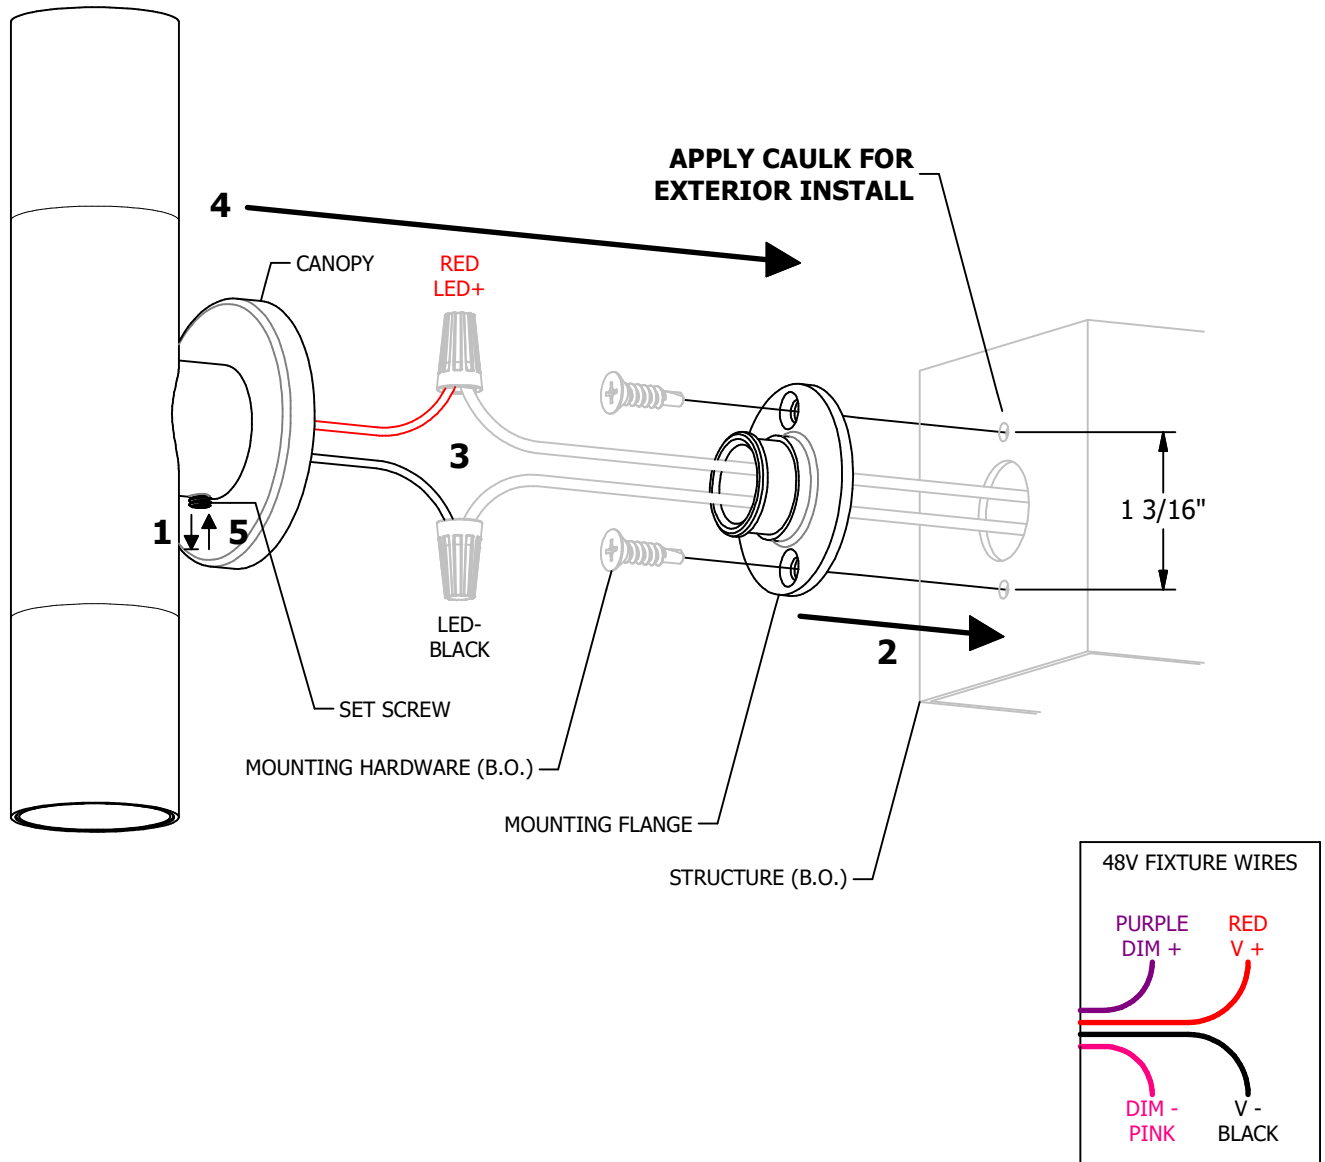

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com