


WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

Individual / BoR Frame Installation.

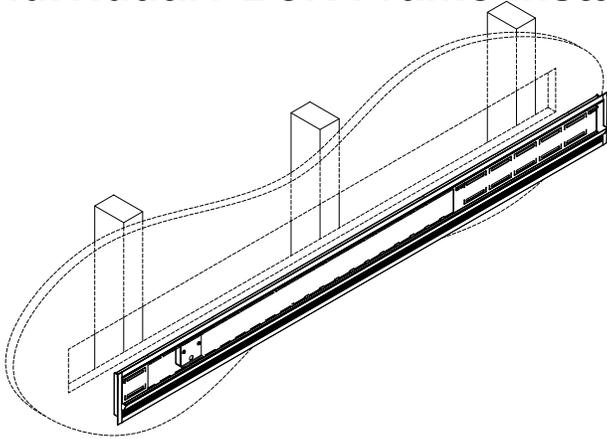


1. Prepare a cutout in the wall:


Individual - $3\frac{5}{8}$ " x (Length of Fixture + $\frac{3}{16}$ ")

Runs - $3\frac{5}{8}$ " x (Length of Fixture + $\frac{3}{8}$ ")



2. Align Splice box (If Required): Remove screws and slide Splice Box Left/Right until it is aligned between studs.

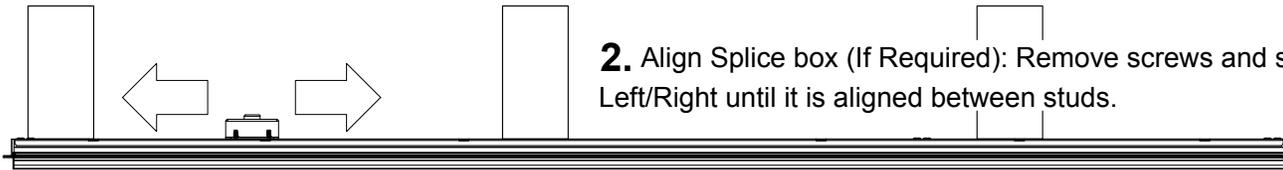


3. When Splice Box is aligned:

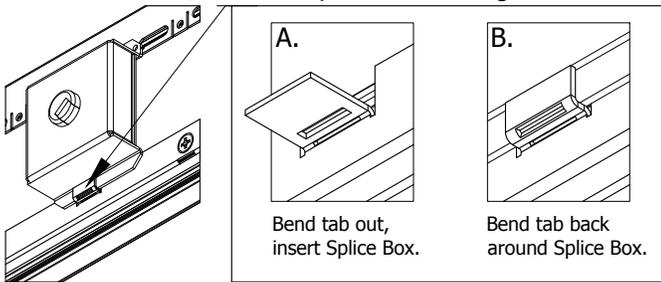

4. Feed plenum rated cable (provided) to remote driver location. (Make remote Driver location easily accessible for maintenance.)

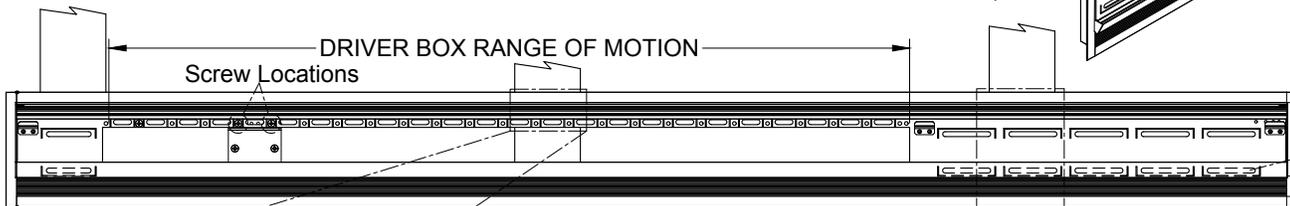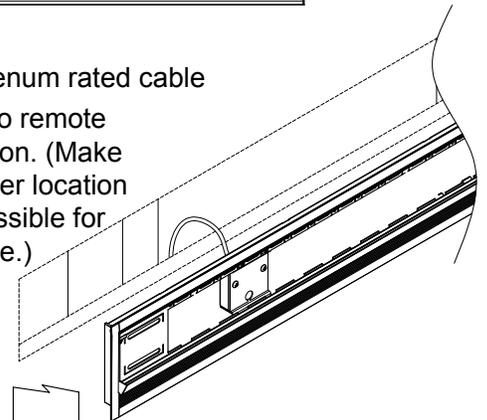


5. Mount Fixture: Secure fixture to structure (studs) via provided slots using **flat head screws** (by others). If fixture does not intersect any structure, blocking must be added (by others).

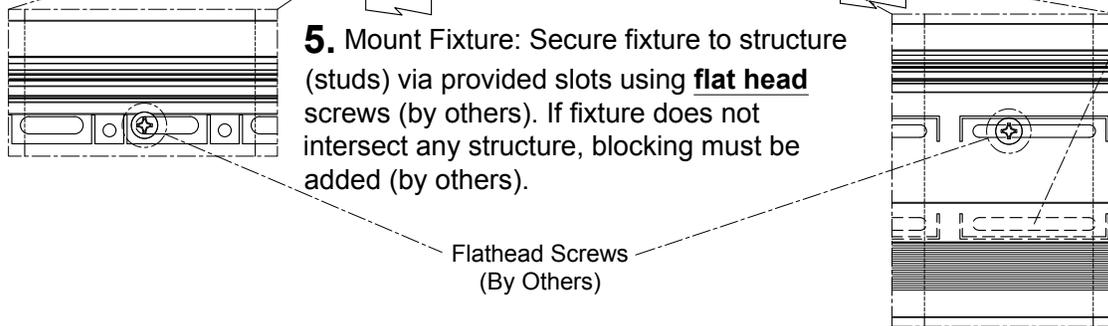


Continuous Run (MoR / EoR) Installation:

Install BoR: Follow steps **1 - 5** from page one

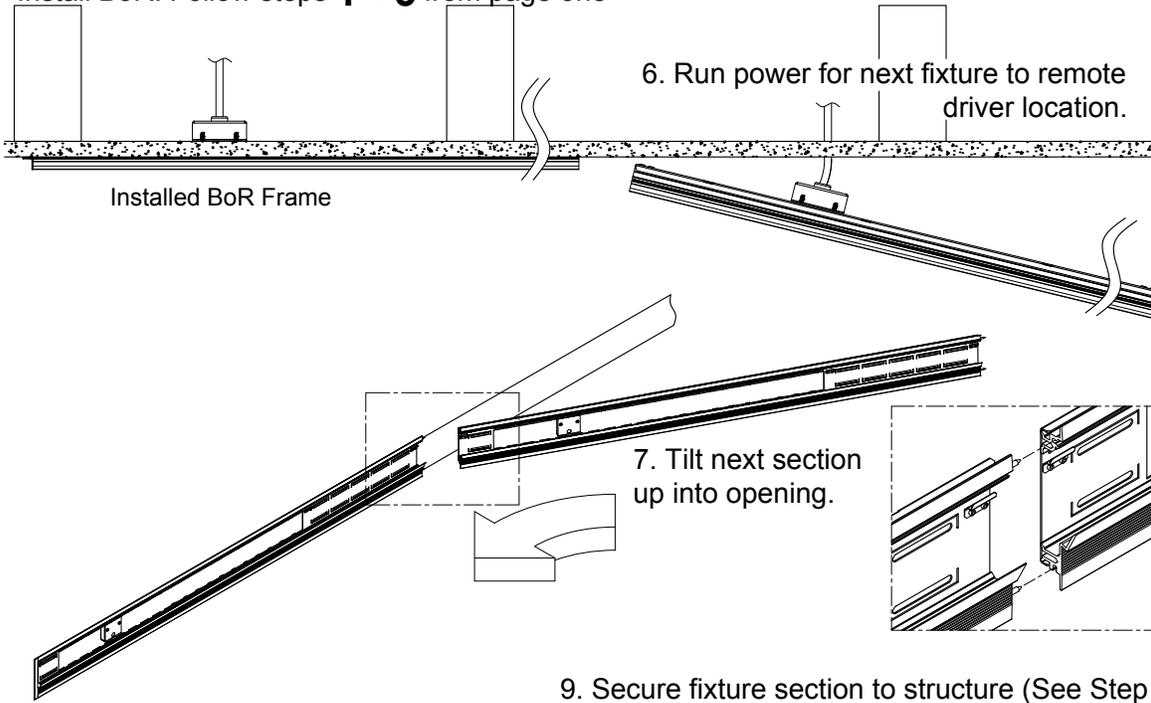


Reflector Installation:

1. Remove Splice Box cover via (2) screws

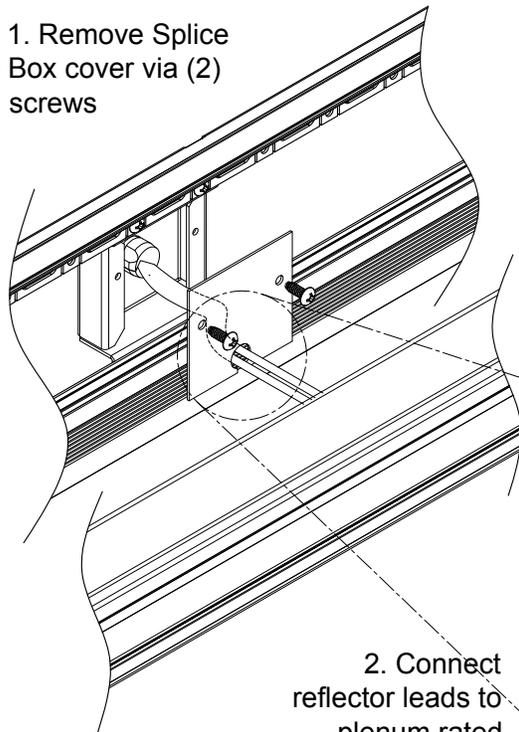


2. Connect reflector leads to plenum rated cable behind Splice Box cover

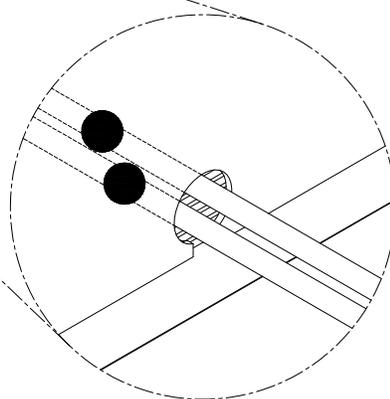


3. Reattach Splice Box cover

4. Install Reflector

A: Feed all excess wiring into Splice Box

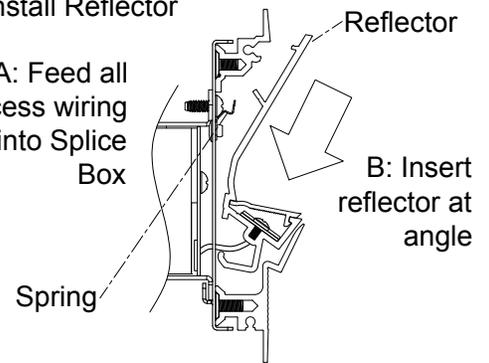





C: Press reflector Down and In until it "snaps" into spring

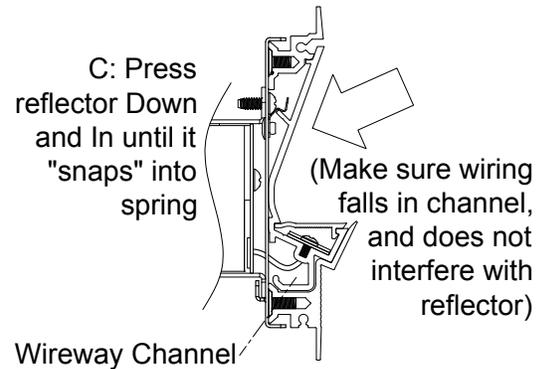

Remote Driver Installation:

Start by installing fixture frame as described on first page.

1. Run plenum rated cable (provided) from fixture to standard junction box (by others)

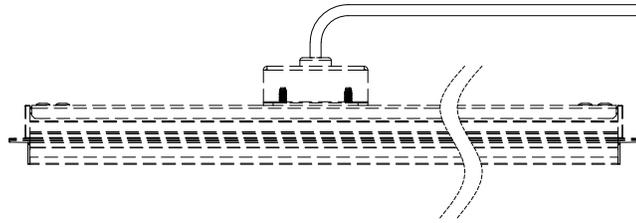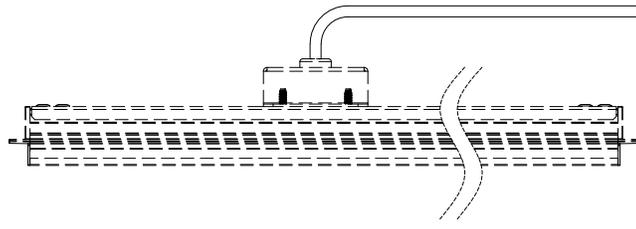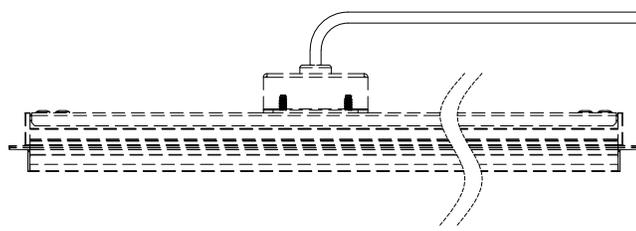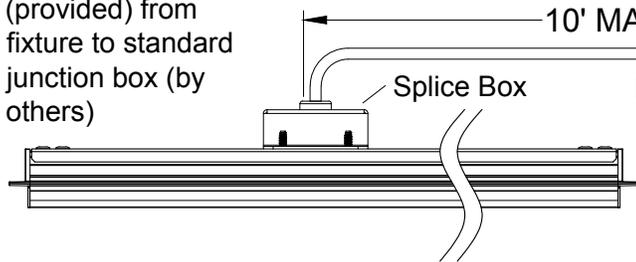

4. (Optional) Run plenum rated cable from multiple other fixtures into junction box and splice into feed from driver box

2. Install Remote Driver Enclosure in an accessible area & run plenum rated cable (provided) to standard junction box (By Others)

3. Splice plenum rated cable from Fixture and from Driver box together.

