

ROOK-X RKX—(UD / UW / DW)

INSTRUCTION SHEET

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT FLECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

TOOLS REQUIRED:


- 1. 5/64" Allen Key
- 2. Wire Stripper/Crimper tool
- 3. Phillips screwdriver
- 4. Appropriate wire connectors (Consult electrical codes)

FIXTURE INSTALLATION


- 1. Ensure power is turned off to the luminaire connection point.
- **2.** Properly connect the wires on the loose end of the Quick Connect to the wires on the wall.
- **3.** Install Gasket and Mounting Plate on the wall. (Diagram 1) After feeding the quick connect through the hole on the mounting plate and gasket.

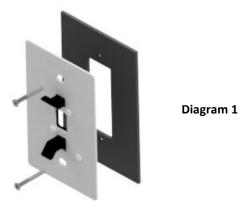


4. Loosen the set screw at the bottom of the neck of the fixture. (Diagram 2)

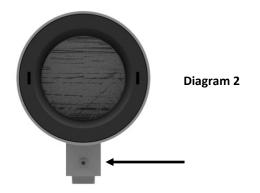

5. Insert the painted face plate on the mounting plate (Orientation marked on plate) after feeding the wall connector through and attaching to quick connect previously installed. (Diagram 3)

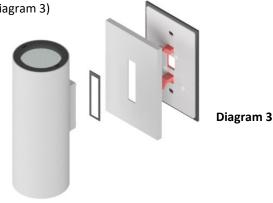

6. Push the excess wire into the back box, while carefully attaching the fixture to the mounting plate. Tighten the set screw at the bottom of the fixture neck to secure it on plate.

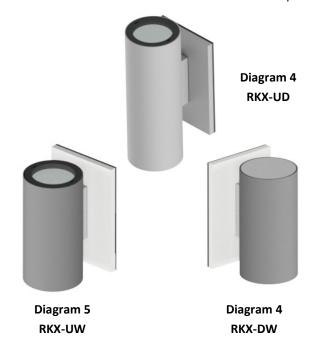

7. Ensure that the gasket and painted plate create a water tight seal to the wall surface. For wet locations contractor must use a clear silicone around the top and sides (Not the bottom) of the plate to ensure water does not enter the electrical box.