INSTRUCTION SHEET



RECESSED MULTIPLE REMODELER FIXTURE INSTALLATION


689-0418


PAGE 1 OF 1

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.


Α.

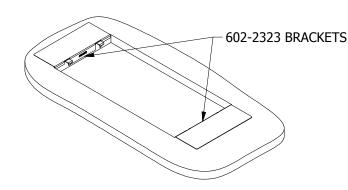




- 1. PLACE 602-2323 BRACKETS ON TOP OF THE CEILING AT THE ENDS OF THE CUTOUT.
- 2. SECURE BRACKETS TO CEILING BY BENDING TABS INTO CEILING BY HAND, HAMMER, SCREWDRIVER, ETC.

В.

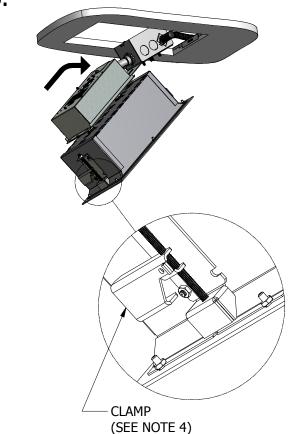

- 3. MAKE ELECTRICAL CONNECTION IN TO J-BOX.
- 4. INSTALL FIXTURE IN CEILING OPENING WITH CLAMPS PARALLEL WITH FIXTURE WALLS (AS SHOWN).

C.

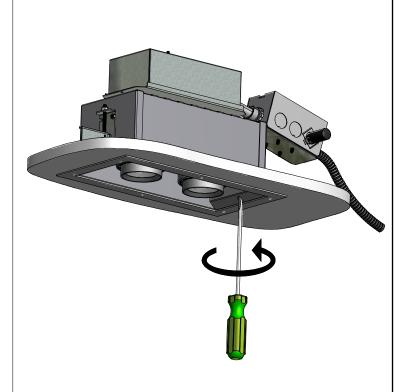

5. USE SCREWDRIVER TO TIGHTEN SCREWS. CLAMP WILL ROTATE IN TO PROPER POSITION TO KEEP FIXTURE IN PLACE WHEN TIGHTENING SCREWS.

CAUTION: DO NOT OVERTIGHTEN TO REDUCE THE RISK OF DAMAGE TO CEILING.

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com