



amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com

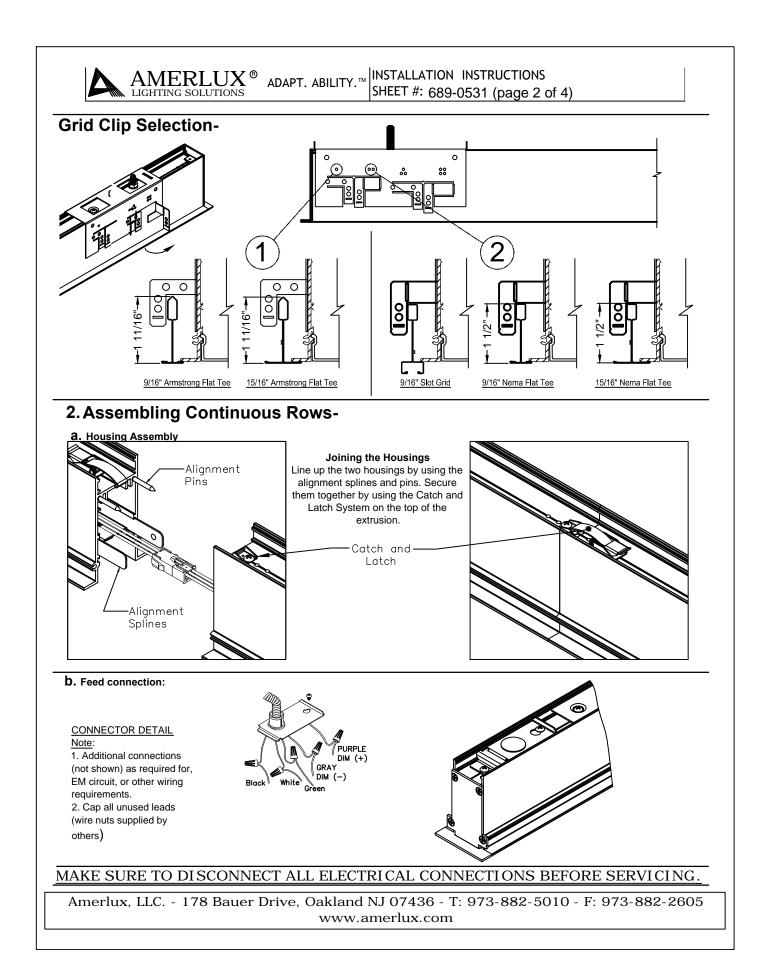


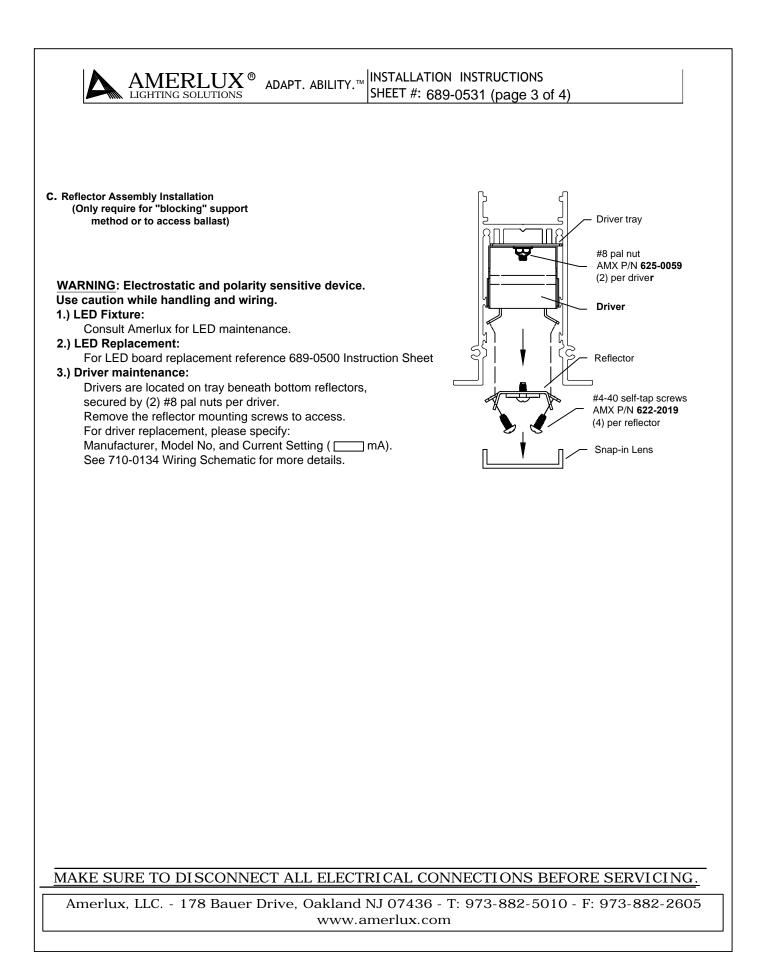

AMERLUX[®] ADAPT. ABILIT

ADAPT. ABILITY.™ INSTALLATION INSTRUCTIONS SHEET #: 689-0531 (page 4 of 4)

Tegular or Vector Ceiling Option:

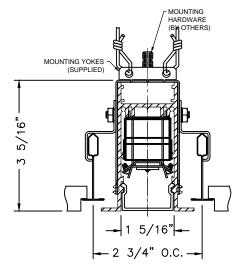

1.) CEILING GRID TO BE INSTALLED (BY OTHERS) 2.) FIXTURE TO BE INSTALLED WITHIN 9/16" or 15/16" FLAT TEE GRID.


3.) REMOVE NUT AND SIDE BRACKETS.

4.) LIFT FIXTURE INTO PLACE IN CEILING GRID, HANDLE FIXTURE CAREFULLY TO AVOID BOWING AND/OR FIXTURE DISTORTION. INSTALL FIXTURE INTO CEILING GRID, MAKING SURE FIXTURE FLANGE RESTS ON CEILING GRID.

5.) RE-INSTALL SIDE BRACKETS AND NUTS.

6.) LOOSEN/TIGHTEN NUT TO ADJUST FIXTURE HEIGHT.
7.) MAKE SURE POWER IS OFF AT ELECTRICAL PANEL. MAKE ELECTRICAL CONNECTION OF POWER/CONTROL FEED (BY OTHERS) AND FIXTURE FEED WIRES (SEE DETAIL ON PAGE 2).
8.) INSTALL FEED CONNECTOR (BY OTHERS) INTO FIXTURE 7/8" HOUSING HOLE.

9.) BRING LENS TO THE FIXTURE IF LENS SHIPPED SEPARATELY. DO NOT TOUCH LED BOARD TO PREVENT POSSIBLE LED DAMAGE. INSTALL LENS. 10.) RESTORE POWER.

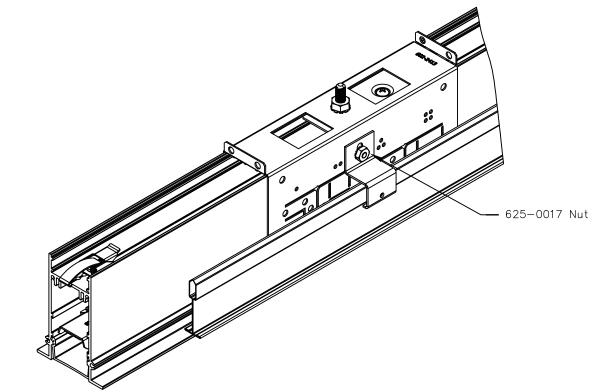

MAKE SURE TO DISCONNECT ALL ELECTRICAL CONNECTIONS BEFORE SERVICING.

Amerlux, LLC. - 178 Bauer Drive, Oakland NJ 07436 - T: 973-882-5010 - F: 973-882-2605 www.amerlux.com